



Tightening Torques

Item	N.m	kgf.m	lb·ft
Ignition coil mounting bolt	9.8 - 11.8	1.0 - 1.2	7.2 - 8.7
Spark plug	19.6 - 29.4	2.0 - 3.0	14.5 - 21.7
Alternator mounting bolt	49.0 - 63.7	5.0 - 6.5	36.2 - 47.0
Battery (+) terminal tightening nut	7.8 - 9.8	0.8 - 1.0	5.2 - 8.7
Battery (-) terminal tightening nut	7.8 - 9.8	0.8 - 1.0	5.2 - 8.7
Battery bracket mounting bolt	8.8 - 29.4	0.9 - 3.0	6.5 - 21.7
Battery tray mounting bolt	8.8 - 29.4	0.9 - 3.0	6.5 - 21.7
Battery sensor cable mounting bolt (Chassis ground)	27.0 - 33.0	2.7 - 3.4	19.9 - 24.3
Starter mounting bolt	49.0 - 63.7	5.0 - 6.5	36.2 - 47.0
Starter cover mounting bolt	8.8 - 13.7	0.9 - 1.4	6.5 - 10.1