



## Operation Principle

Engine Condition	Not Running	Idling or Decelerating	Normal Operation	Accelerating and High Load
Vacuum in Intake Manifold	0	High	Moderate	Low
PCV Valve	Close	Slightly Open	Properly Open	Fully Open
Blow-by Gas Flow	0	Small	Medium	Large
Schematic Diagram	<p>Intake Manifold</p>	<p>Intake Manifold</p>	<p>Intake Manifold</p>	<p>Intake Manifold</p>