





## Removal

1. Disconnect the vapor hose (A).
2. Remove the PCV valve (B).

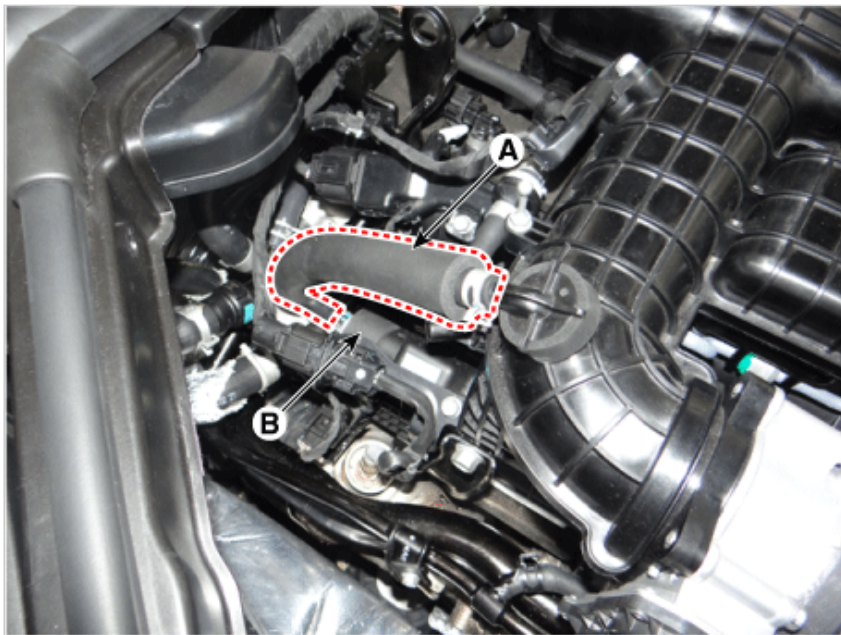

## Inspection

1. Insert a thin stick (A) into the PCV valve (B) from the threaded side to check for plunger movement.

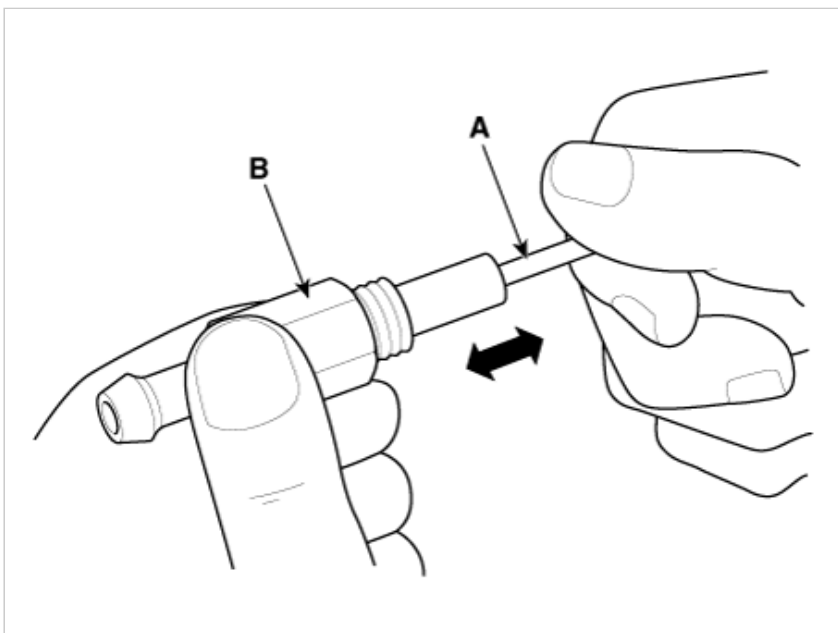

### NOTICE

If the plunger does not move (PCV valve is clogged), clean or replace the valve.

## Installation

1. Install in the reverse order of removal.

### PCV Valve :

7.9 - 11.7 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.6 lb·ft)