




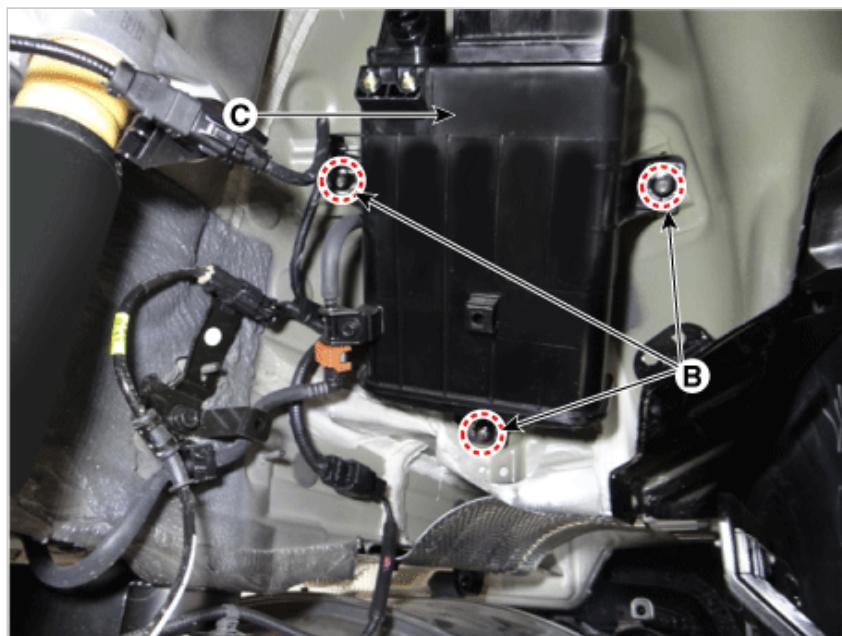

## Removal

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the rear-left wheel & tire and wheel house cover.
3. Remove the fuel tank air filter & canister close valve assembly.  
**(Refer to Emission Control System - Fuel Tank Air Filter")**
4. Disconnect the vapor hose quick-connector (A).
5. Remove the canister assembly (C) from the vehicle after removing the mounting nuts (B).

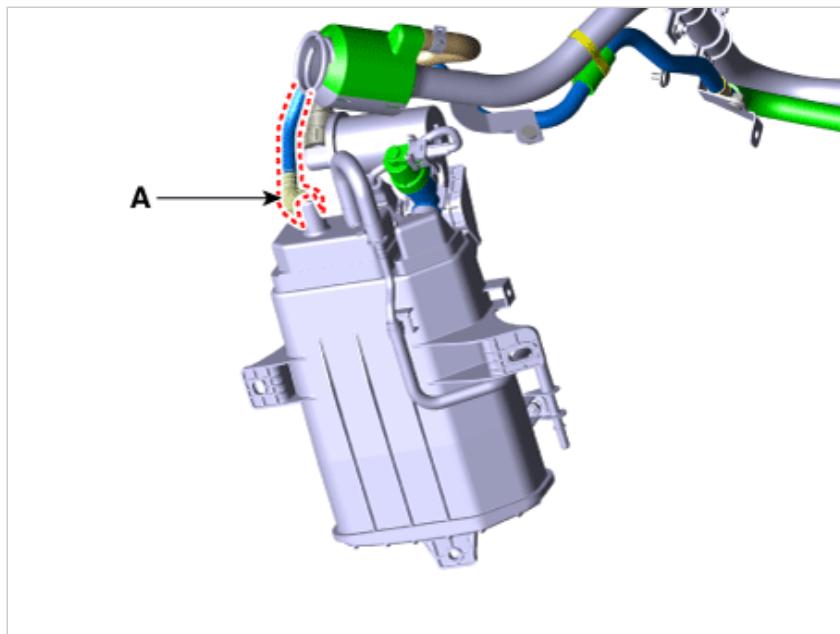


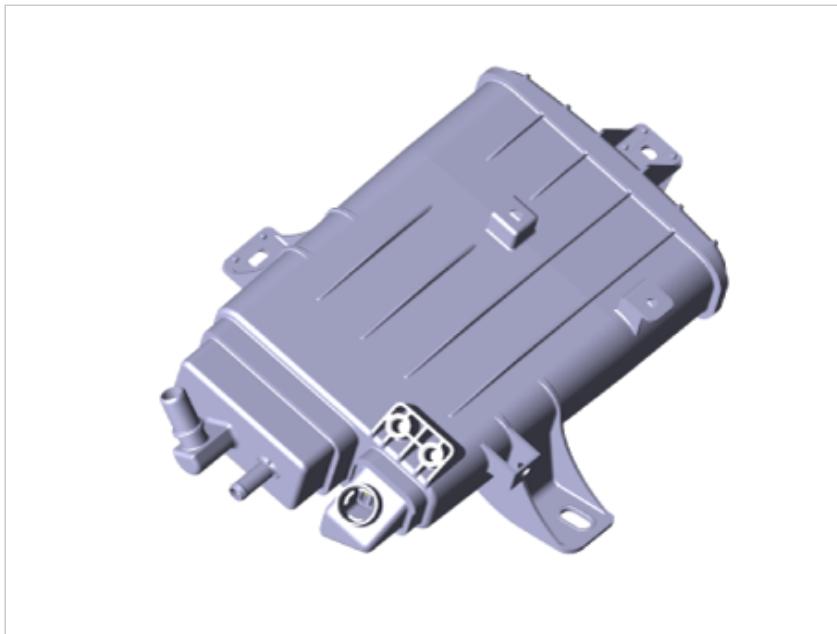

## Inspection

1. Check for the following items visually.

- Cracks or leakage of the canister
- Loose connection, distortion, or damage of the vapor hose/tube

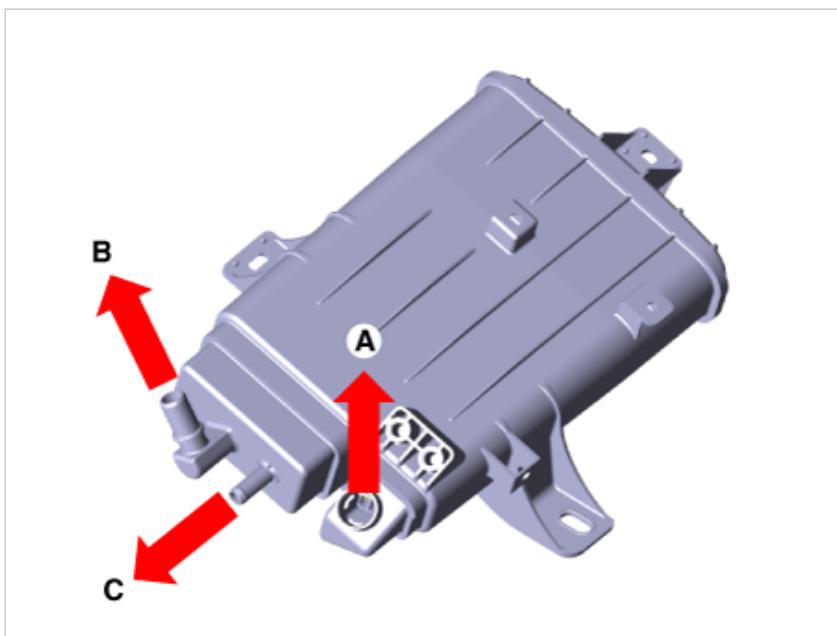

A: Canister ↔ Atmosphere

B: Canister ↔ Fuel Tank

C: Canister ↔ Intake Manifold

## Installation

1. Install in the reverse order of removal.