





Removal

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the rear-left wheel & tire and wheel house cover.
3. Disconnect the vent hose quick-connector (A).
4. Remove the fuel tank air filter & CCV assembly (B) after removing the bolts.

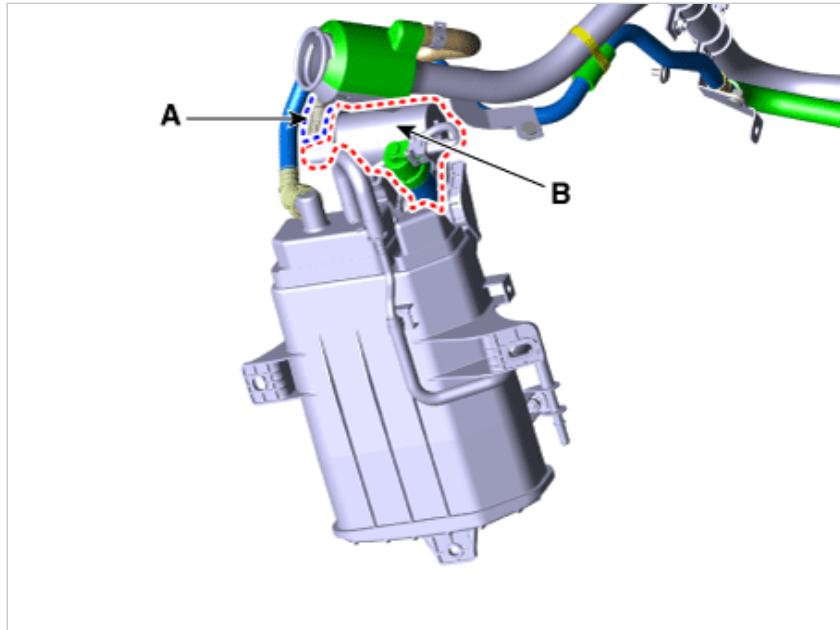

5. Release the lever (A), and then separate the canister close valve (B) from the fuel tank air filter after rotating it in the direction of the arrow in the figure.

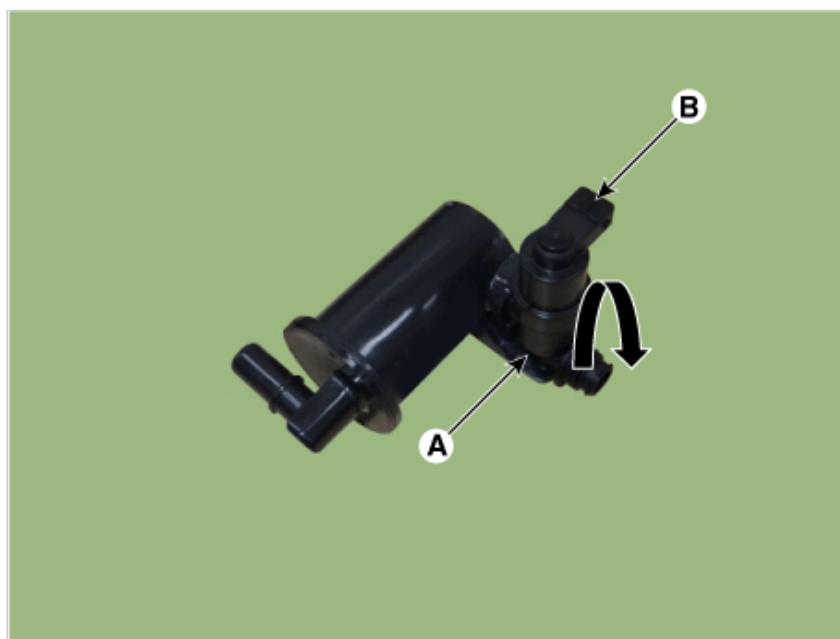



Installation

1. Install in the reverse order of removal.