



## Troubleshooting

Symptom	Suspected area
Engine does not start or struggles to start	Vapor hose damaged or disconnected
Engine struggles to start	Malfunctioning Purge Control Solenoid Valve
Rough idle or engine stalls	Vapor hose damaged or disconnected Malfunctioning PCV valve
Rough idle	Malfunctioning Evaporative Emission Control System
Excessive oil consumption	Positive crankcase ventilation line clogged