




Removal

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Disconnect the boost pressure sensor connector (A).
3. Remove the mounting bolt (B), and then remove the sensor from the intercooler outlet pipe.

Boost pressure sensor mounting bolt :

9.8 - 11.8 N·m (1.0 - 1.2 kgf·m, 7.2 - 8.7 lb·ft)

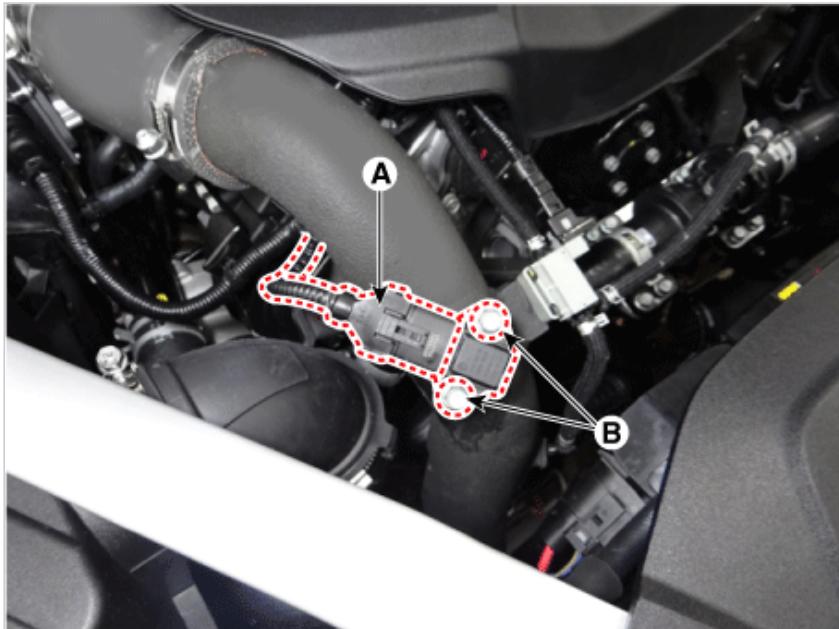

Installation

NOTICE

- Install the component to the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.
- Insert the sensor in the installation hole and be careful not to damage it.

1. Install in the reverse order of removal.