



Inspection

1. Switch "OFF" the ignition.
2. Disconnect the OCV connector.
3. Measure resistance between the OCV terminals 1 and 2.
4. Check that the resistance is within the specification.

Specification: 9.4 - 10.4 Ω [20°C(68°F)]

Removal


[Bank 1 / Intake]

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the variable force solenoid (VFS).
(Refer to Engine Control System - "Variable Force Solenoid (VFS)")
3. Remove the cylinder head assembly.
(Refer to Engine Mechanical System - "Cylinder Head")
4. Remove the installation nut (A), and then remove the cvvt oil control valve from the engine.



[Bank 1 / Exhaust]

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the cylinder head assembly.
(Refer to Engine Mechanical System - "Cylinder Head")
3. Remove the installation bolt (A), and then remove the valve from the engine.

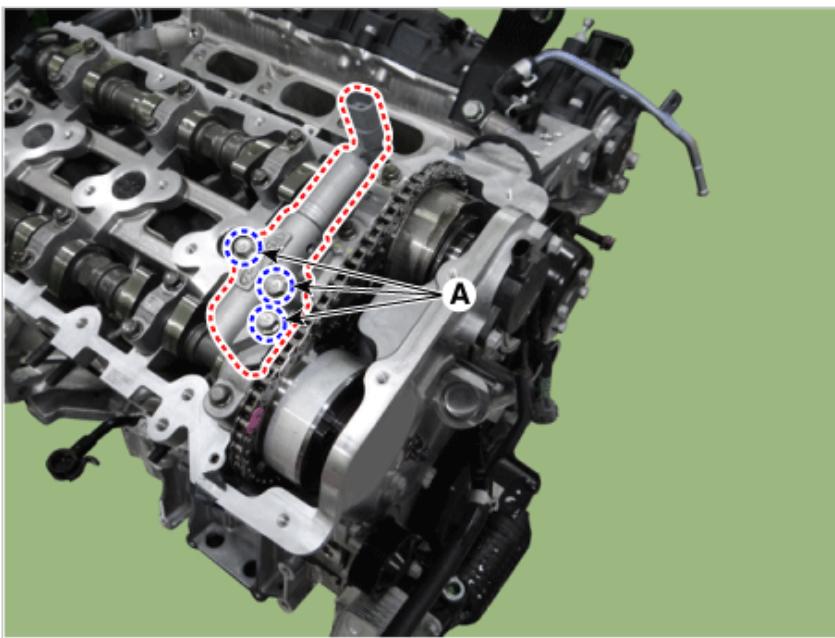


[Bank 2 / Intake]

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the variable force solenoid (VFS).
(Refer to Engine Control System - "Variable Force Solenoid (VFS)"")
3. Remove the cylinder head assembly.
(Refer to Engine Mechanical System - "Cylinder Head")
4. Remove the installation nut (A), and then remove the cvvt oil control valve from the engine.



[Bank 2 / Exhaust]

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the cylinder head assembly.
(Refer to Engine Mechanical System - "Cylinder Head")
3. Remove the installation bolt (A), and then remove the valve from the engine.

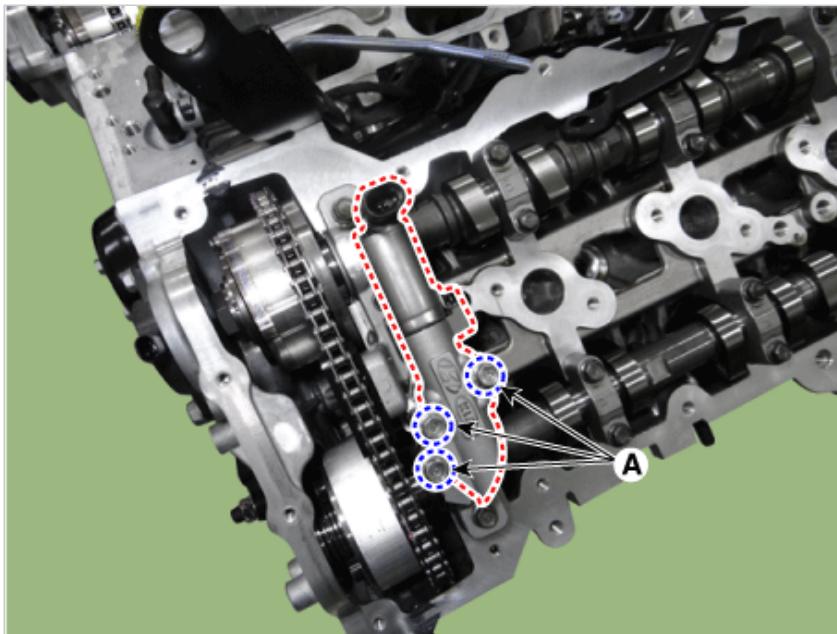

Installation

NOTICE

- Install the component to the specified torque.
- Note that internal damage may occur if the component drops. In this case, inspect it before installation.
- Apply the engine oil to the valve O-ring.
- Exactly distinguish the color of the valve and harness connectors in banks 1 and 2 when installing, or the engine will operate abnormally (Refer to the table below).

1. Install in the reverse order of removal.