




Inspection

1. Connect the KDS on the Data Link Connector (DLC).
2. Measure the output voltage of the FTPS.


Specification: Refer to "Specification "

Removal

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the rear seat cushion.
(Refer to Body - "Rear Seat Assembly")
3. Remove the sub fuel sender service cover (A) after loosening the mounting screws.

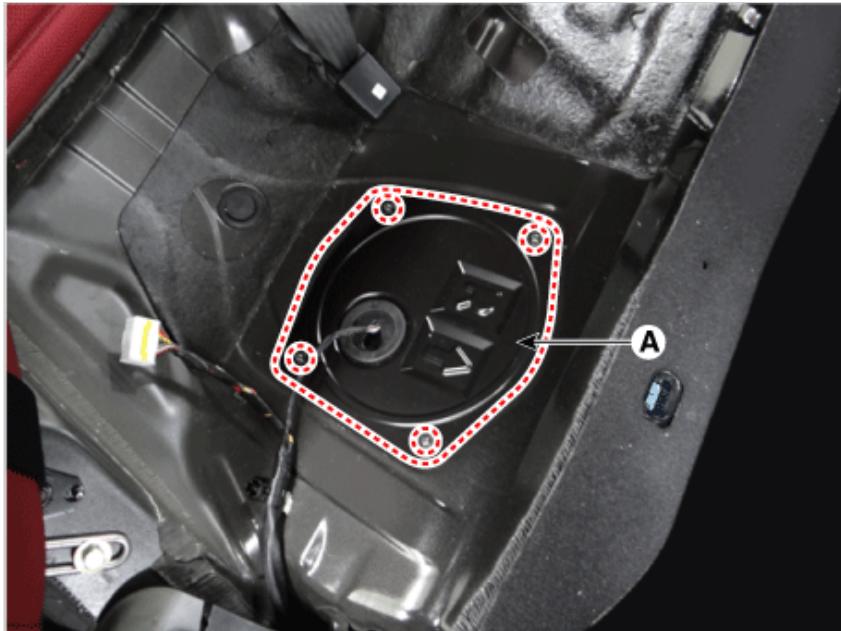

4. Disconnect the fuel tank pressure sensor connector (A).
5. Remove the fuel tank pressure sensor (B) after releasing the hooks vertically.

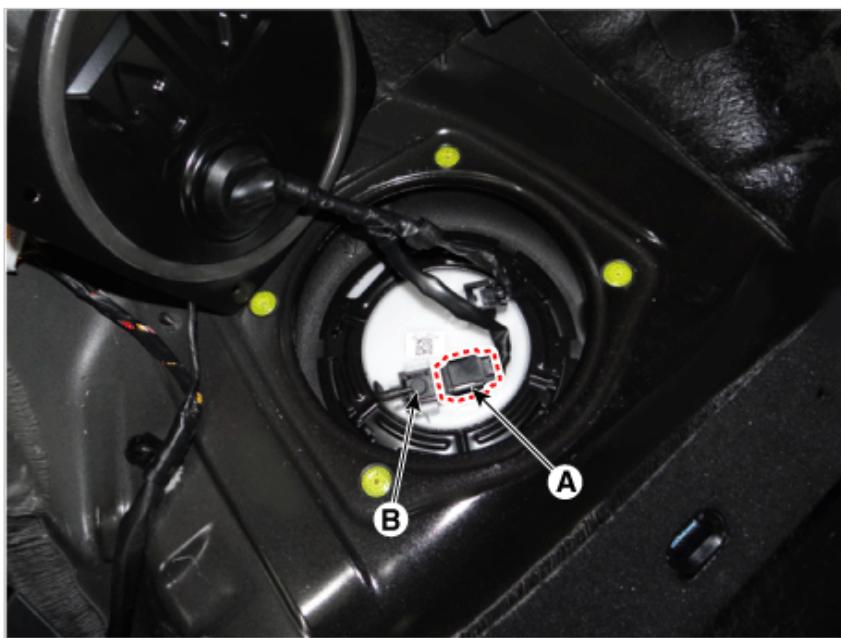

Installation

NOTICE

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. In this case, use it after inspecting.
- Insert the sensor in the installation hole and be careful not to damage when installation.

1. Install in the reverse order of removal.