



Removal

NOTICE

Fuel pump motor cannot be replaced on its own; it should be replaced with the fuel pump assembly.
(Refer to Fuel Delivery System - "Low Pressure Fuel Pump")

Installation

NOTICE

Fuel pump motor cannot be replaced on its own; it should be replaced with the fuel pump assembly.
(Refer to Fuel Delivery System - "Low Pressure Fuel Pump")