




## Components Location


### Fuel Tank & Filler-Neck Assembly

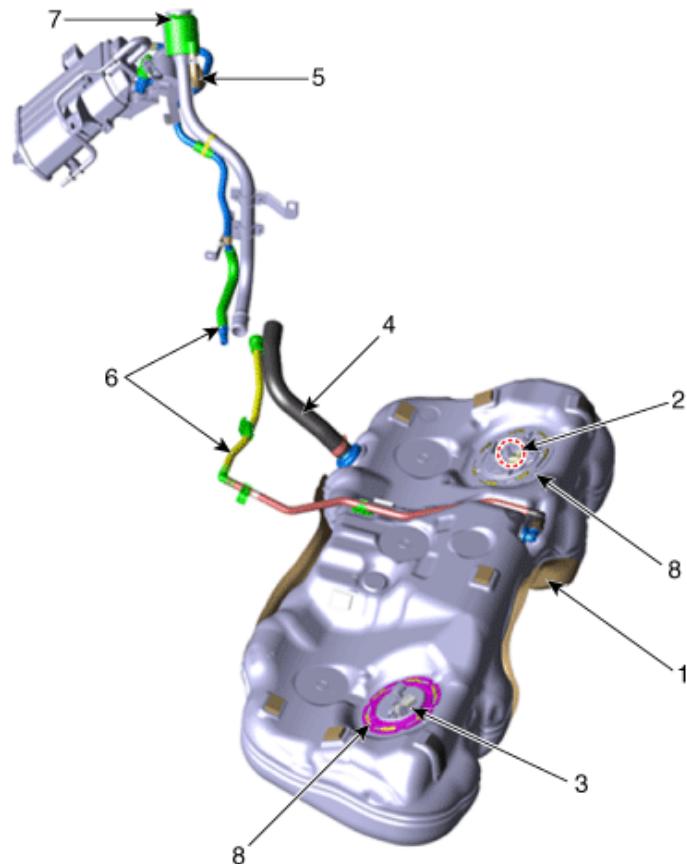

- 1. Fuel Tank
- 2. Low Pressure Fuel Pump
- 3. Sub Fuel Sender
- 4. Fuel Filler Hose

- 5. Ventilation Hose
- 6. Vapor Tube
- 7. Filler-Neck Assembly
- 8. Fuel Pump Plate Cover

### Low Pressure Fuel Pump

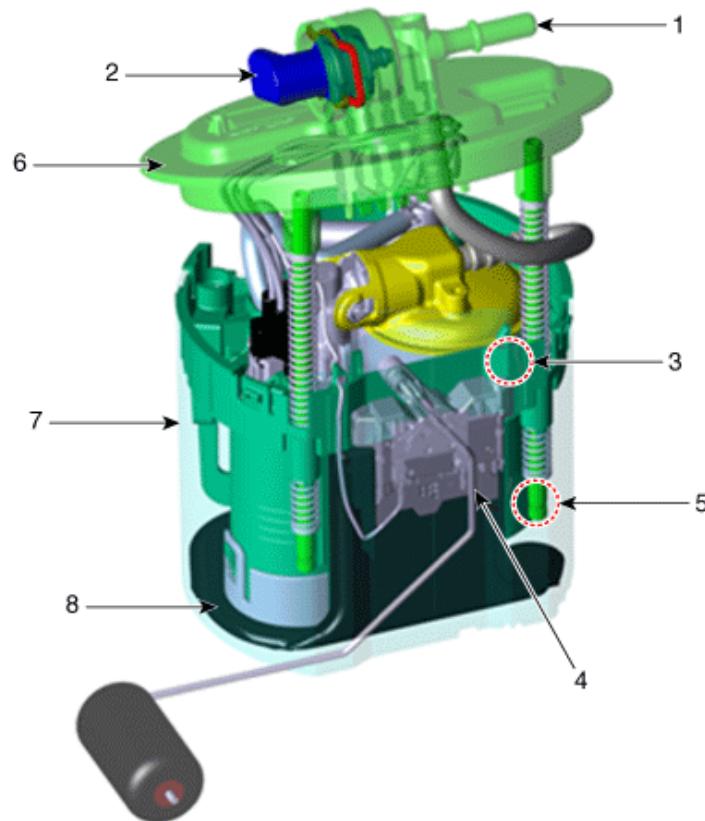

- 1. Fuel Feed Port
- 2. Fuel Pressure Sensor (FPS)
- 3. Fuel Filter
- 4. Fuel Sender

- 5. Fuel Pressure Regulator
- 6. Head Assembly
- 7. Reservoir-Cup
- 8. Pre-filter

#### High Pressure Fuel Line

 Click to see large image...

- 1. High Pressure Pump
- 2. High Pressure Pipe
- 3. Delivery Pipe
- 4. Injector
- 5. Rail Pressure Sensor (RPS)

#### **WARNING**

Whenever the high pressure fuel pump, fuel pipe, delivery pipe, or injector is removed immediately after shutting off the engine, an injury may be caused by the release of highly pressurized fuel. Release the residual pressure in the high pressure fuel line by referring to the "Residual fuel pressure release procedure" below before removing any high pressure fuel system components.