




Removal


1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the fuel filler cap after opening the fuel filler door.
3. Lift the vehicle.
4. Remove the rear-left wheel & tire and wheel house cover.
5. Disconnect the fuel filler hose (A).



6. Disconnect the vapor tube (A).

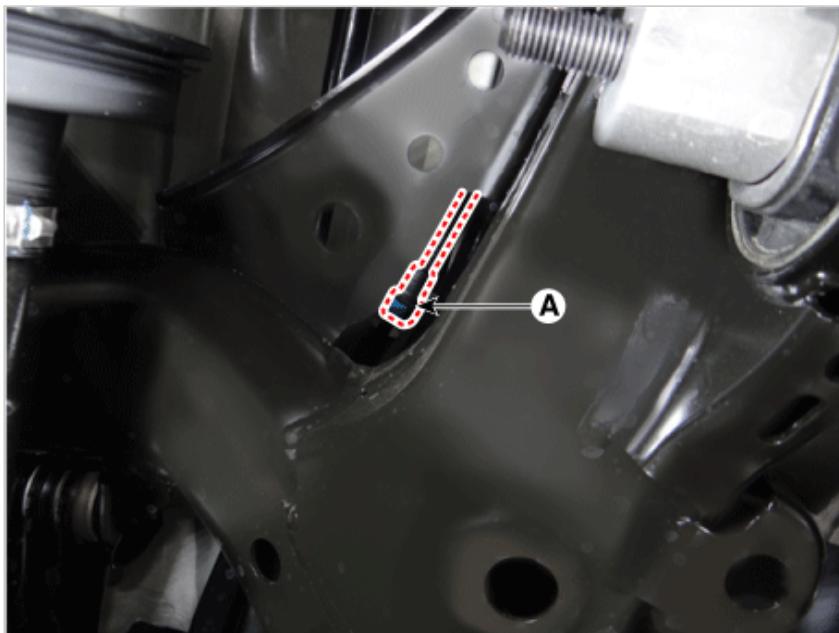

7. Remove the filler-neck assembly from the vehicle after removing bracket mounting nuts (A).

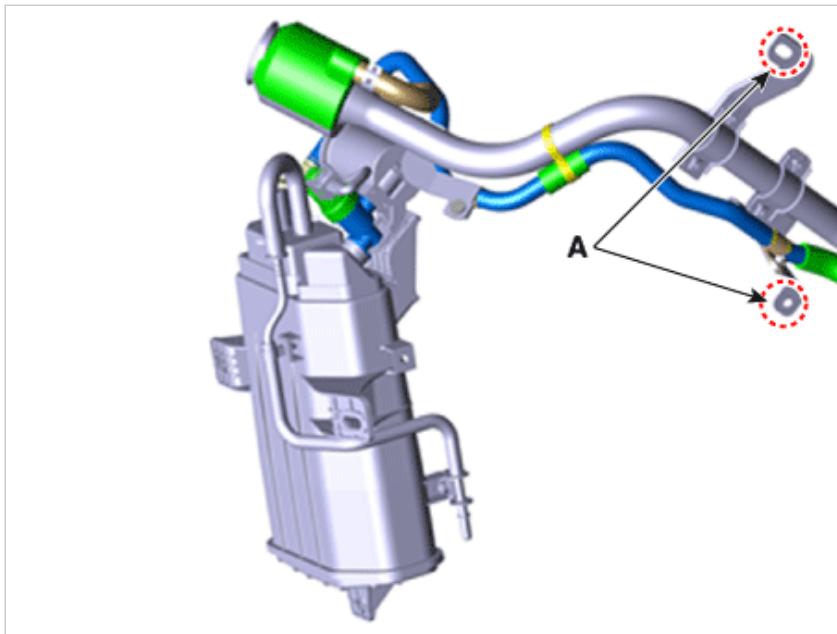

Installation

1. Install in the reverse order of removal.