



## Removal

**NOTICE**

Main fuel sender cannot be replaced on its own; it should be replaced with the fuel pump assembly.  
(Refer to Fuel Delivery System - "Low Pressure Fuel Pump")

## Installation

**NOTICE**

Main fuel sender cannot be replaced on its own; it should be replaced with the fuel pump assembly.  
(Refer to Fuel Delivery System - "Low Pressure Fuel Pump")