



Inspection

1. Check for loose connection of BBCPS and vacuum hose, and damage of vacuum hose.
2. Connect KDS to DLC (Data Link Cable).
3. Warm up the engine to normal operating temperature.
4. Monitor "BBVPS" parameter on KDS.