


Replacement

Hood Switch Inspection

- 1. Remove the front bumper assembly.
(Refer to Body - "Front Bumper Assembly")
- 2. Disconnect the hood switch connector (A).

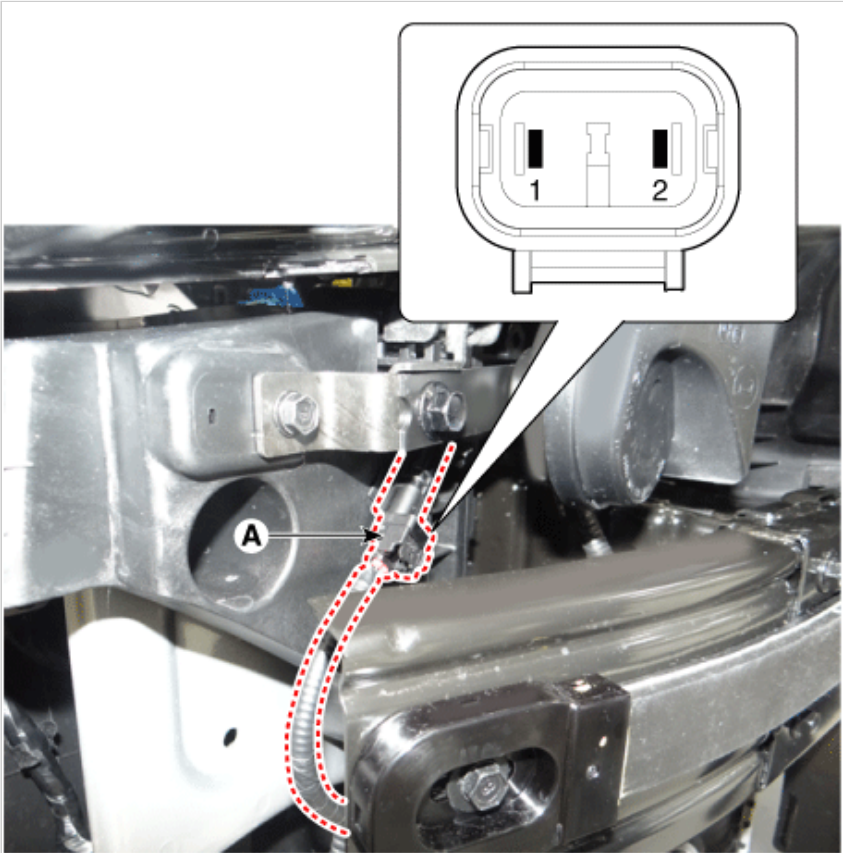

- 3. Check for continuity between the terminals and ground as shown below.
(Refer to Body - "Hood Latch")

Terminal Position	1	2
Open hood(Free)		
Close hood(Push)		