




## Removal

1. Remove the front seat assembly.  
**(Refer to Front Seat - "Front Seat Assembly")**
2. Remove the front seat belt buckle (A) after loosening the mounting bolt.

**Tightening torque :**

39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.9 - 39.8 lb·ft)

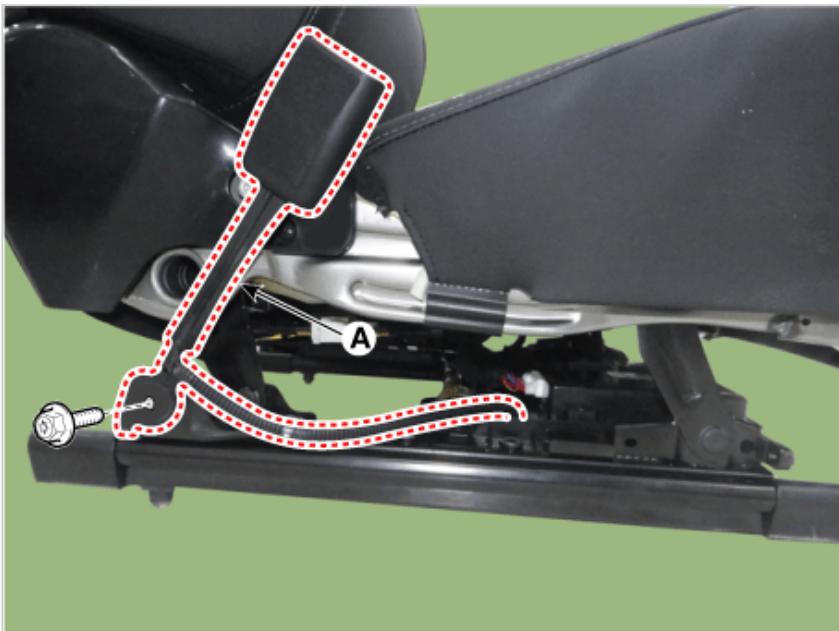

## Installation

1. Install in the reverse order of removal.