




Components Location




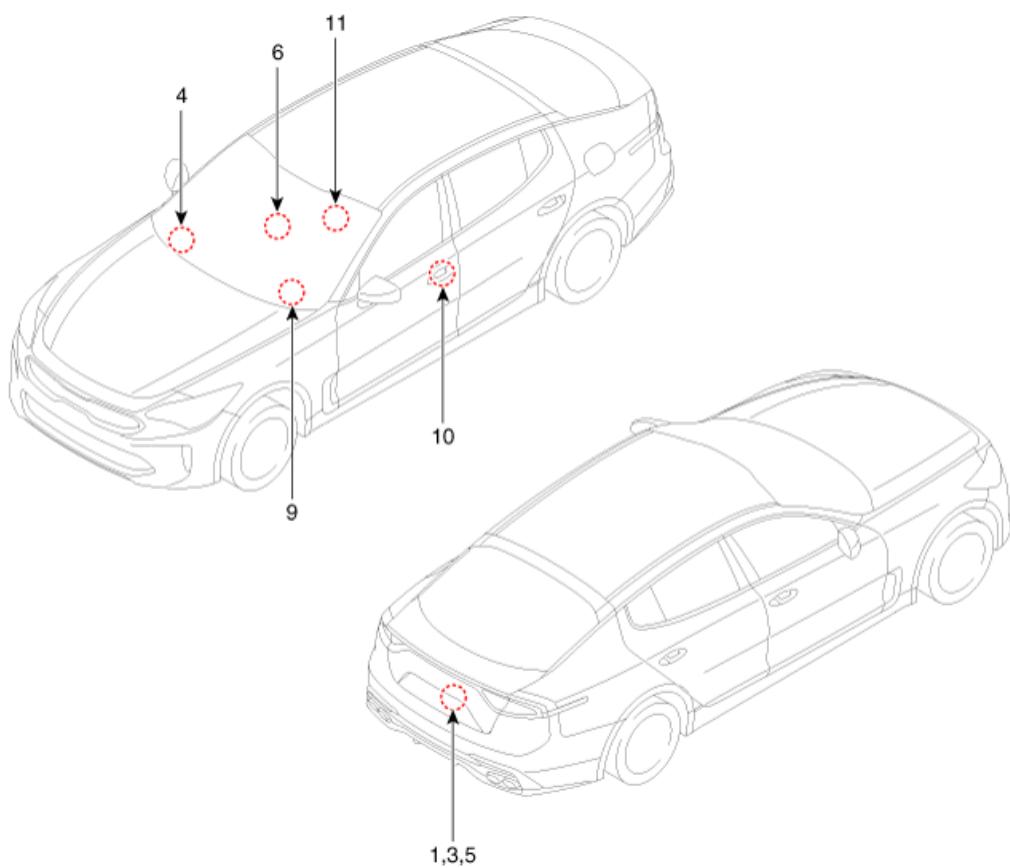


1. Battery sensor

7. Alternator

- 2. Brake Booster Vacuum Pressure Sensor (BBVPS)
- 3. AGM battery
- 4. DC/DC Converter [200W]
- 5. DC/DC Converter [400W]
- 6. ISG OFF Switch

- 8. Starter
- 9. Brake switch
- 10. Door switch
- 11. Seat belt switch
- 12. Hood switch

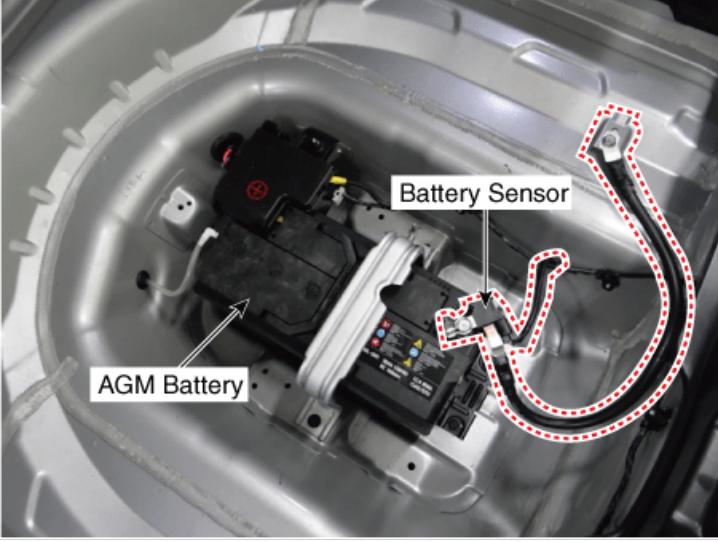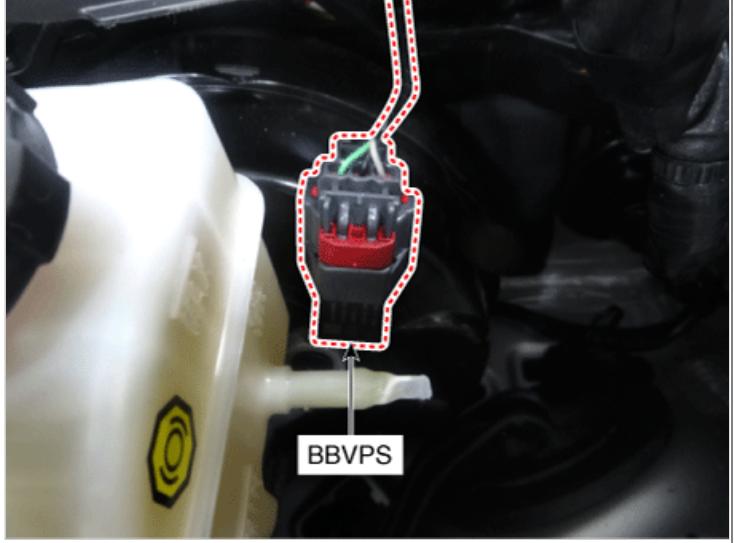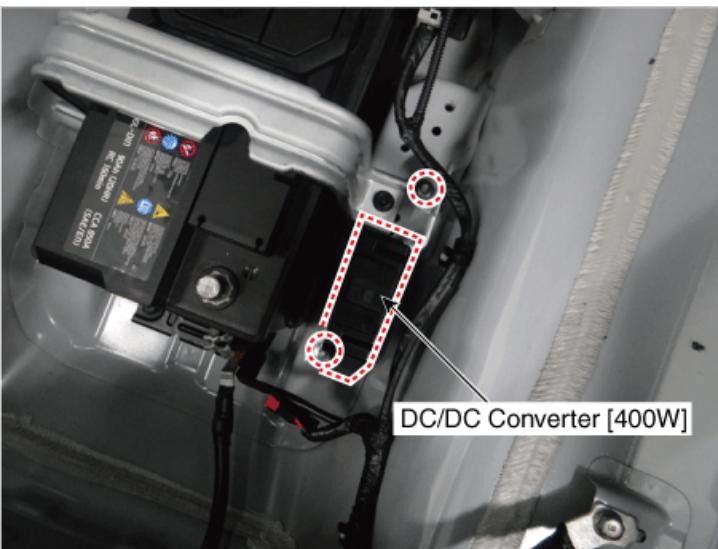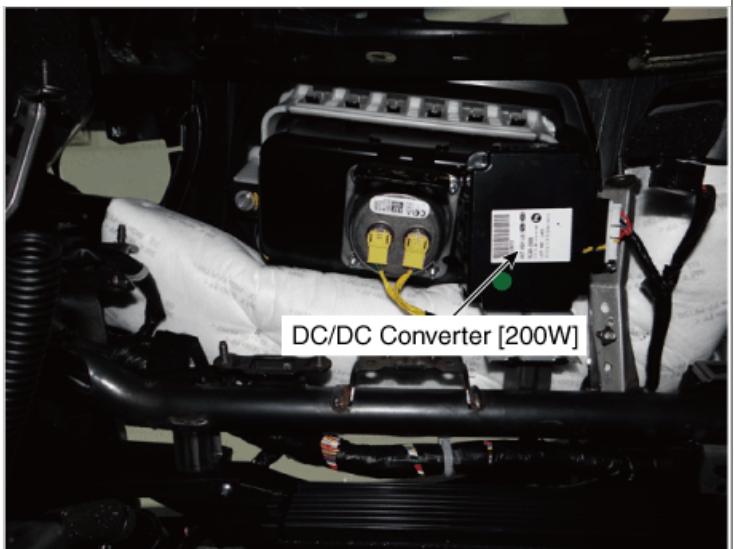
1. Battery sensor 3. AGM battery	2. Brake Booster Vacuum Pressure Sensor (BBVPS)
 <p>Battery Sensor</p> <p>AGM Battery</p>	 <p>BBVPS</p>
4. DC/DC Converter [400W]	5. DC/DC Converter [200W]
 <p>DC/DC Converter [400W]</p>	 <p>DC/DC Converter [200W]</p>
6. ISG OFF Switch	7. Alternator




8. Starter




9. Brake switch

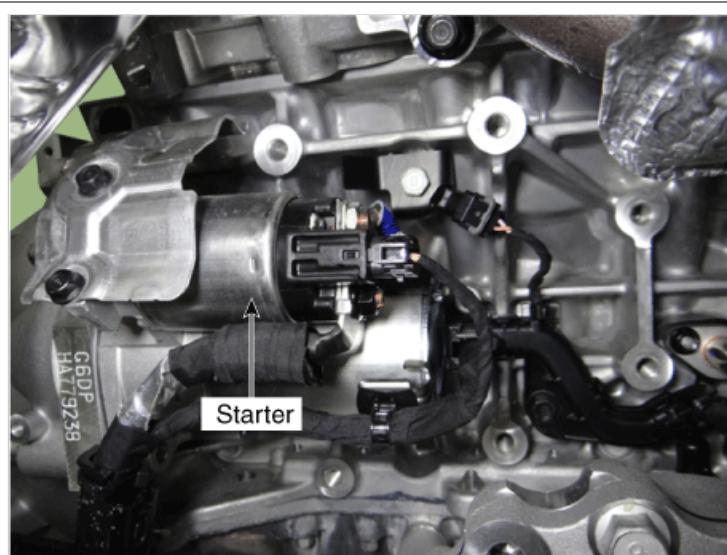

10. Door switch

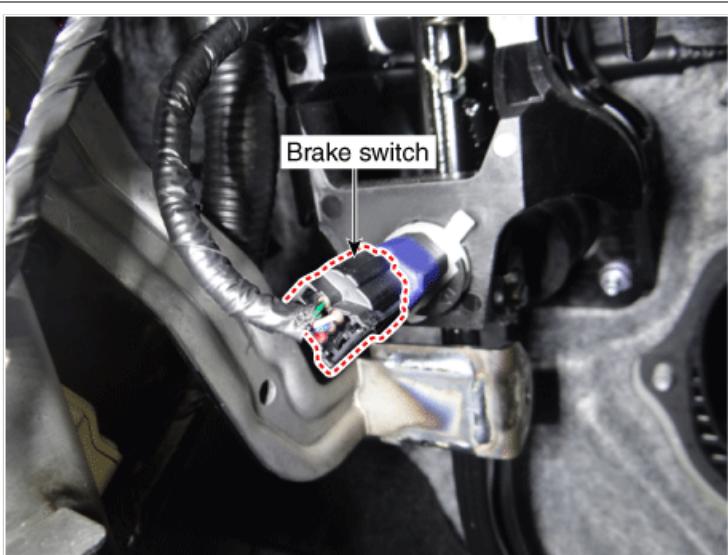

11. Seat belt switch

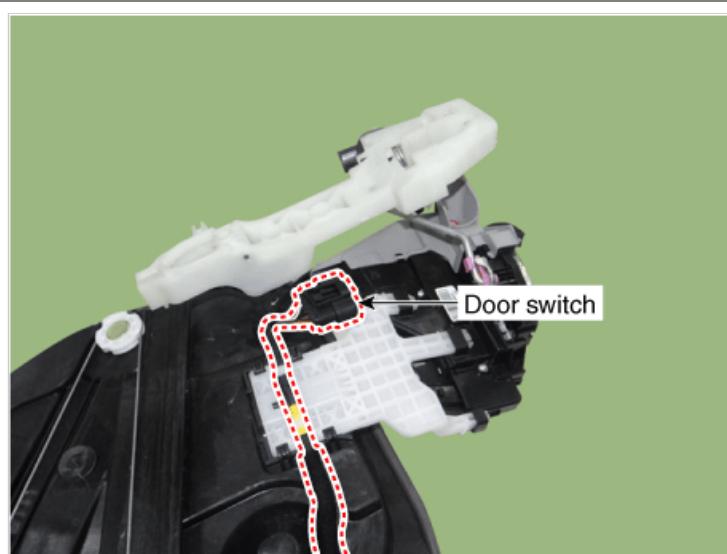

12. Hood switch

