



Removal

1. Remove the parking release cable after loosening the fastener (A).

NOTICE

The existing fastener (A) must be replaced with a new one. (Do not reuse it.)




2. Remove the parking release cable from the bracket after loosening a bolt (A).

NOTICE

When installing , tighten the bolt (A) to the specified torque after removing gap by pushing the parking release cable in the direction of the arrow.

Tightening torque :

12.7 - 15.7 N·m (1.3 - 1.6 kgf·m, 9.4 - 11.6 lb·ft)

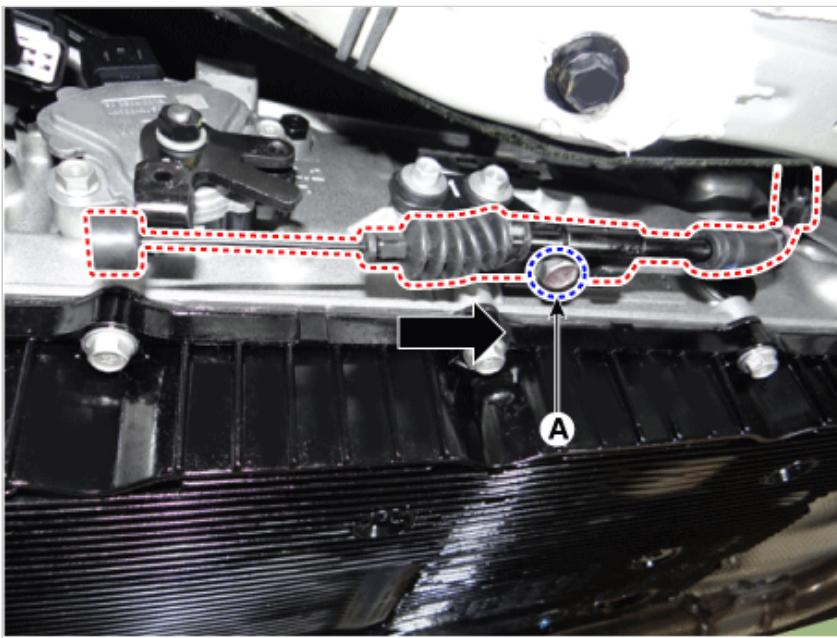

3. Remove the floor console assembly.
(Refer to Body - "Floor Console Assembly")
4. Remove the wiring fixing clip (A) from the parking release actuator.




5. Loosen the parking release actuator mounting nuts (A, B).

Tightening torque :

(A) 9.8 - 14.7 N·m (1.0 - 1.5 kgf·m, 7.2 - 10.8 lb·ft)

(B) 8.8 - 13.7 N·m (0.9 - 1.4 kgf·m, 6.5 - 10.1 lb·ft)

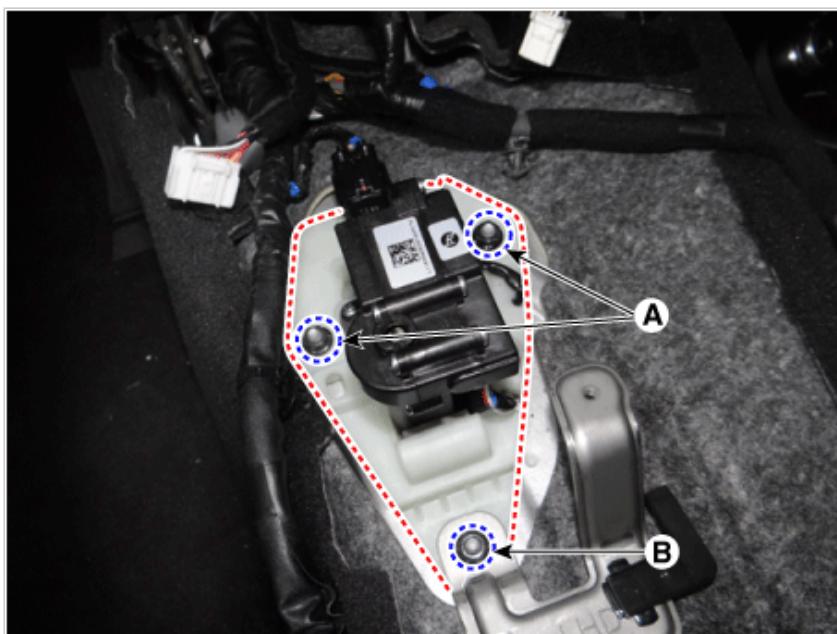

6. Remove the bracket (A).

Tightening torque :

8.8 - 13.7 N·m (0.9 - 1.4 kgf·m, 6.5 - 10.1 lb·ft)



7. Disconnect the parking release actuator connector (A). Then, remove the cable by pulling it toward the vehicle interior.



Installation

1. Install in the reverse order of removal.