



Inspection

1. Check signal waveform of speed sensor using the KDS.

Replacement

Information

The speed sensor is integrated into the E-module that can't be disassembled. So refer to "E-module" for the removal or installation procedure of the speed sensor.

1. Replace the E-module.

(Refer to Automatic Transmission Control System - "E-Module")