




Components Location

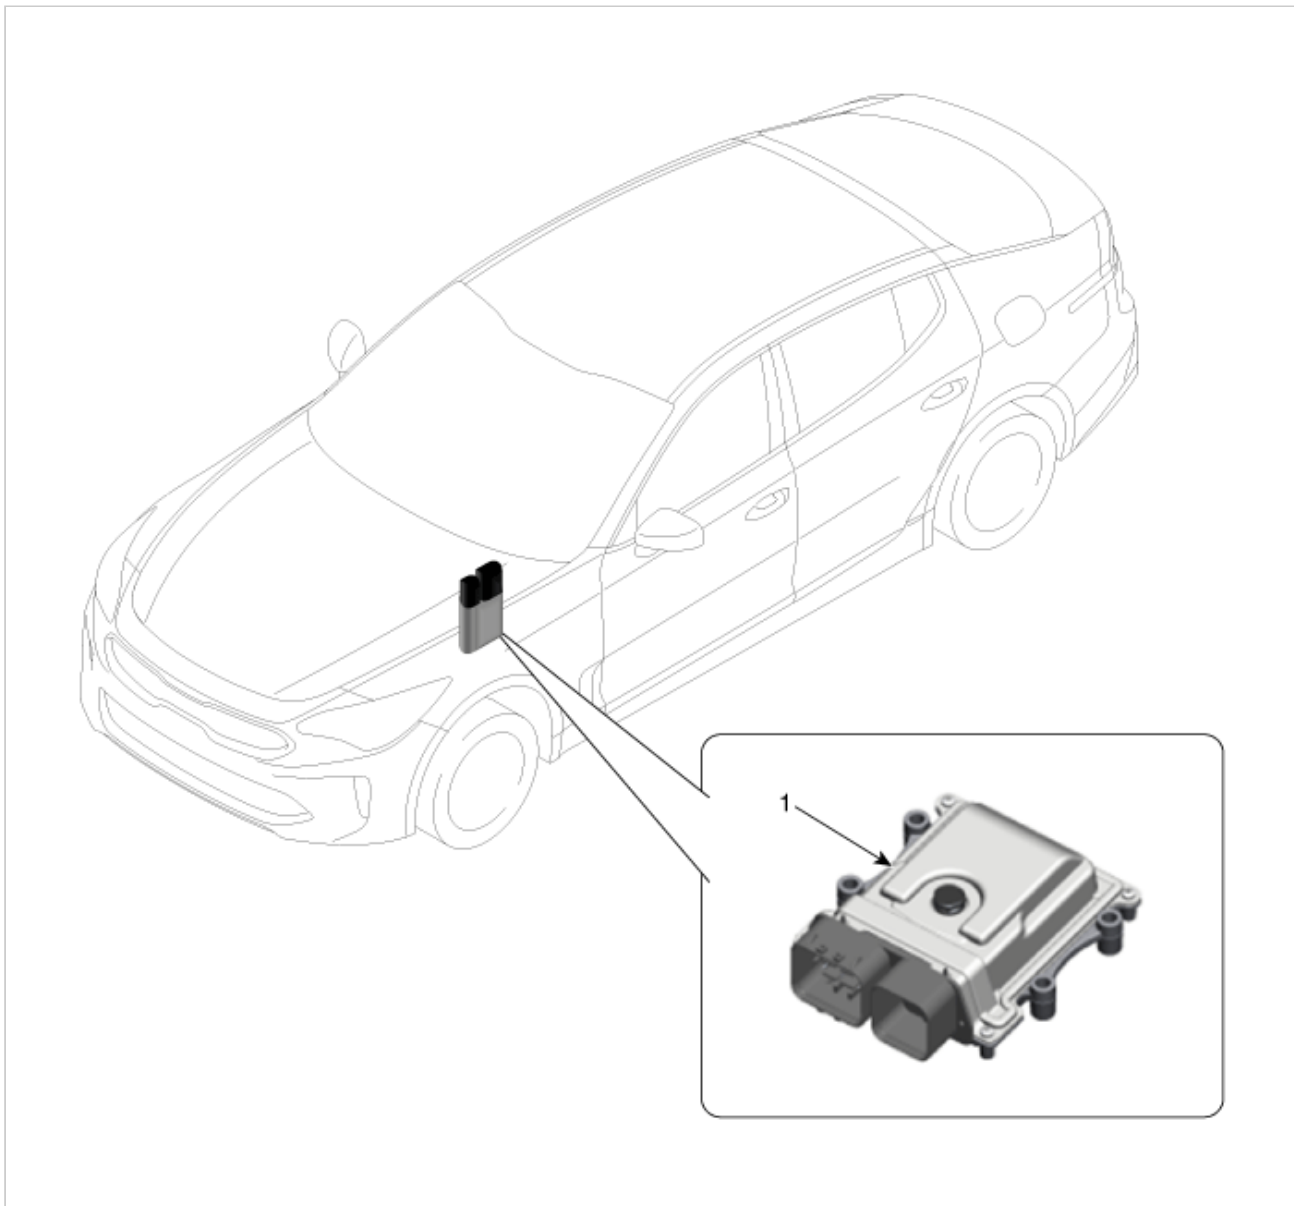

1. Transmission Control Module (TCM)