



Description

- The sensor used is a thermistor (NTC) in which resistance changes with temperature variation.
- When the TCM supplies power to sensor, the sensor output value changes depending on ATF temperature.
- Oil temperature sensor is integrated with E module.