



Replacement

NOTICE

It is not recommended to replace the valve body. If the valve body needs to be replaced, the automatic transmission assembly should be replaced and the oil pressure characteristics should be input using the KDS. If replacing the valve body, it is not possible to input the oil pressure characteristics using the KDS and if not performing the oil pressure characteristics input procedure, a shift shock or delay may occur.

1. Replace the automatic transmission assembly.

(Refer to Automatic Transmission System - "Automatic Transmission System")