



Oil-pressure characteristics input

Solenoid valve oil-pressure characteristics input procedure

1. Perform the oil-pressure characteristics input procedure using the KDS.

2. Click the "OK" button after checking the condition.

S/W Management**■ Oil-pressure Characteristics Input (Solenoid Valve Replacement)****● [Oil Pressure Characteristics Input (Solenoid Valve Replacement)]**

This function is to input oil pressure characteristics to TCU after solenoid valve replacement.

●[Condition]

1. IG On
2. Shift Lever : P
3. Vehicle Speed : 0 km/h
4. Engine Stop

If ready, please click **[OK]** button.

OK**Cancel**

Do not touch any system buttons while performing this function.

3. Click the "OK" button after selecting the replaced solenoid valve.

S/W Management

■ Oil-pressure Characteristics Input (Solenoid Valve Replacement)

● [Oil Pressure Characteristics Input (Solenoid Valve Replacement)]

The process for oil pressure characteristics input is proceeded.

After selecting the replaced solenoid valve correctly, please Click **OK** button.

Solenoid valve selection :

6 Clutch control solenoid valve

OK **Cancel**

! Do not touch any system buttons while performing this function.

4. Check the code that was recorded before installing the new solenoid valve.

S/W Management


■ Oil-pressure Characteristics Input (Solenoid Valve Replacement)

● [Oil Pressure Characteristics Input (Solenoid Valve Replacement)]

This function is to input oil pressure characteristics to TCU after 6 Clutch control solenoid valve replacement.

If ready, Click **OK** button.

* Caution : please check the code at first before replacement.

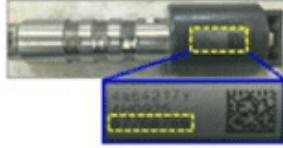

OK **Cancel**

! Do not touch any system buttons while performing this function.

5. Click the "OK" button after inputting oil pressure characteristics for the replaced solenoid valve.

S/W Management

■ Oil-pressure Characteristics Input (Solenoid Valve Replacement)

● [Oil Pressure Characteristics Input (Solenoid Valve Replacement)]

After inputting oil pressure characteristics for the replaced solenoid Valve,
please click **[OK]** button.

WAGRC1575062	2CI2
7776	5766
7667	6667
7777	7777
7788	8778
7777	6FFF



OK

Cancel



Do not touch any system buttons while performing this function.