




## Replacement

1. Remove the front driveshaft.  
**(Refer to Driveshaft Assembly - "Front Driveshaft")**
2. Remove the TJ joint assembly.  
**(Refer to Driveshaft Assembly - "TJ Joint")**
3. Using a plier or flat-tipped (-) screwdriver, remove the BJ boot bands (A).

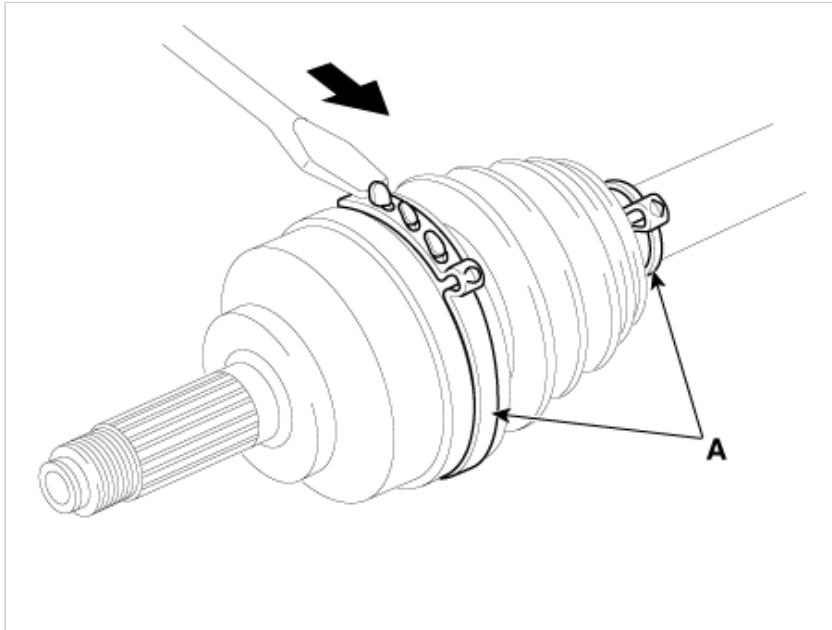

4. Remove the BJ boot.
5. Install in the reverse order of removal.

### ▲ CAUTION

- Do not disassemble the BJ assembly.
- Special grease must be applied to the driveshaft joint. Do not substitute with another type of grease.
- The boot band should be replaced with a new one.

6. Check the front alignment.  
**(Refer to Suspension System - "Alignment")**