
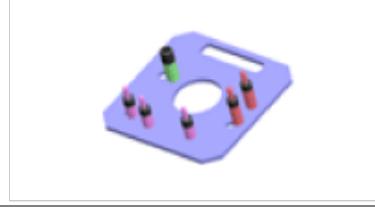
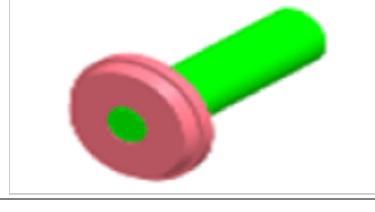
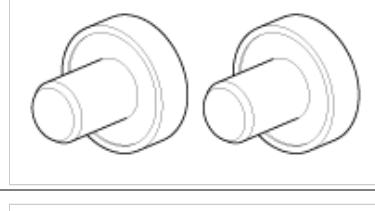
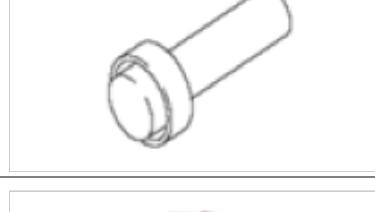
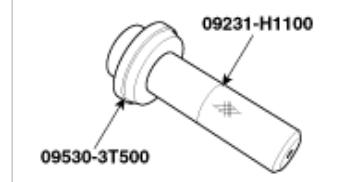
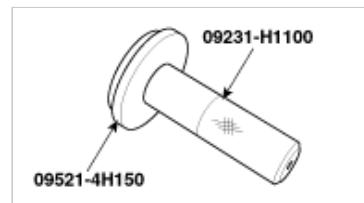


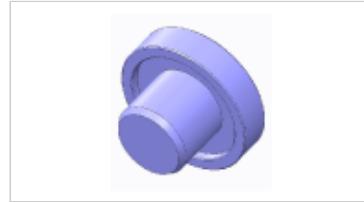

Special Service Tools

Tool Name / Number	Illustration	Description
09495-3K000 Band installer		Installation of ear type boot band
09495-39100 Band installer		Installation of hook type boot band
09231-H1100 Bar		
09500-11000 Bar		
09432-3D900 Front differential carrier side bearing race installer		Installation of the side bearing race. (Use with 09231-H1100)
09474-4E100 Front differential carrier side oil seal installer		Installation of the differential carrier oil seal installer. (Use with 09231-H1100)
09474-4E200 Front/Rear differential bearing remover		Used for removing differential bearing
09474-4E300 Pinion cage oil seal installer		Installation of pinion cage oil seal.

		
09474-4E400 Front differential assembly working stand		Removal & Installation of the differential assembly working stand.
09474-4E500 Front differential pinion front bearing race installer		Installation of pinion front bearing race. (Use with 09231-H1100)
09432-3D500 Front differential side bearing installer		Installation of the differential carrier side bearing. (Use with (09231-H1100))
09432-33700 Front/Rear differential pinion rear bearing race installer		Installation of the pinion bearing. (Use with 09231-H1100)
09452-1P100 Front differential carrier cover oil seal installer		Installation of differential carrier cover oil seal. (Use with 09231-H1100)
09452-2W300 Front differential side bearing race remover adapter		Removal of differential side bearing race.
OK530-4J100 Rear differential assembly working stand		Removal & Installation of the differential assembly working stand.
OK530-4J200 Rear differential pinion inner bearing race installer		Installation of pinion bearing race.

		
0K530-4J300 Rear differential bearing installer		Installation of differential bearing.
09530-3T500 Differential side oil seal installer		Installation of the differential side oil seal. (Use with 09231-H1100)
09530-3T600 Differential pinion oil seal installer		Installation of the differential pinion oil seal.
09521-4H150 Rear differential pinion outer bearing race installer		Used for installing drive pinion outer bearing outer race Used with the handle (09231-H1100)
09530-3C200 Rear differential carrier side bearing installer		Installation of the differential bearing.
09453-3B500 Differential case side race installer		Installation of the differential bearing race. (Use with 09231-H1100)
0K517-J5100		Knuckle expand tool