




Components

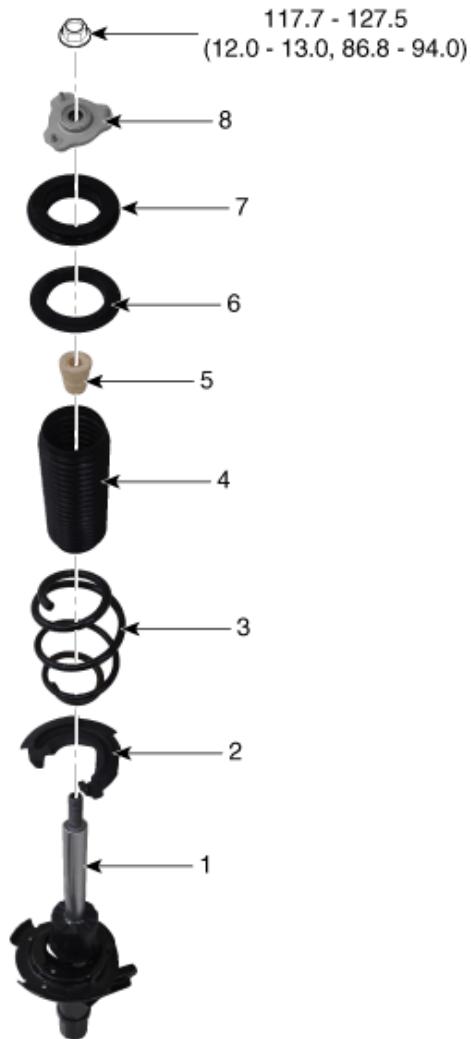

Tightening torque : N·m (kgf·m, lb·ft)

- | | |
|---------------------|-----------------------|
| 1. Shock absorber | 5. Bumper stopper |
| 2. Spring lower pad | 6. Spring upper cover |
| 3. Coil spring | 7. Strut bearing |
| 4. Dust cover | 8. Insulator assembly |