



Tightening Torques

Front Suspension

Item	Tightening torque		
	N·m	kgf·m	lb·ft
Wheel nut	107.9 - 127.5	11.0 - 13.0	79.6 - 94.0
Compression arm to sub frame	156.9 - 176.5	16.0 - 18.0	115.7 - 130.2
Compression arm to front axle	88.3 - 107.9	9.0 - 11.0	65.1 - 79.6
Lateral arm to sub frame	117.7 - 132.4	12.0 - 13.5	86.8 - 97.6
Lateral arm to front axle	88.3 - 107.9	9.0 - 11.0	65.1 - 79.6
Front stabilizer bar to sub frame	49.0 - 63.7	5.0 - 6.5	36.2 - 47.0
Front stabilizer bar to front stabilizer link	98.1 - 117.7	10.0 - 12.0	72.3 - 86.8
Tie rod end to front axle	88.3 - 107.9	9.0 - 11.0	65.1 - 79.6
Front strut assembly to body	63.7 - 78.4	6.5 - 8.0	47.0 - 57.9
Sub frame to body	176.5 - 196.1	18.0 - 20.0	130.2 - 144.7

Rear Suspension

Item	Tightening torque		
	N·m	kgf·m	lb·ft
Tire wheel hub nuts	107.9 - 127.5	11.0 - 13.0	79.6 - 94.0
Rear shock absorber to body	63.7 - 78.5	6.5 - 8.0	47.0 - 57.9
Rear shock absorber to lower arm	156.9 - 176.5	16.0 - 18.0	115.7 - 130.2
Rear upper arm front to cross member	117.7 - 132.4	12.0 - 13.5	86.8 - 97.6
Rear upper arm front to rear axle	117.7 - 132.4	12.0 - 13.5	86.8 - 97.6
Rear upper arm rear to rear axle	117.7 - 132.4	12.0 - 13.5	86.8 - 97.6
Rear upper arm rear to cross member	117.7 - 132.4	12.0 - 13.5	86.8 - 97.6
Rear stabilizer bar to sub frame	49.0 - 63.7	5.0 - 6.5	36.2 - 47.0
Rear stabilizer link to rear axle	98.1 - 117.7	10.0 - 12.0	72.3 - 86.8
Rear stabilizer bar to stabilizer link	98.1 - 117.7	10.0 - 12.0	72.3 - 86.8
Rear lower arm to cross member	137.3 - 156.9	14.0 - 16.0	101.3 - 115.7
Rear lower arm to rear axle	156.9 - 176.5	16.0 - 18.0	115.7 - 130.2
Assist arm to cross member	137.3 - 156.9	14.0 - 16.0	101.3 - 115.7
Assist arm to rear axle	117.7 - 132.4	12.0 - 13.5	86.8 - 97.6
Trailing arm to cross member	117.7 - 132.4	12.0 - 13.5	86.8 - 97.6
Trailing arm to rear axle	117.7 - 132.4	12.0 - 13.5	86.8 - 97.6
Cross member to body	176.5 - 196.1	18.0 - 20.0	130.2 - 144.7
Cross member to bracket	44.1 - 58.8	4.5 - 6.0	32.5 - 43.4