


Hub nut tightening sequence

Tighten the hub nuts as follows.

Tightening torque:
107.9 - 127.5 N·m (11.0 - 13.0 kgf·m, 79.6 - 94.0 lb·ft)

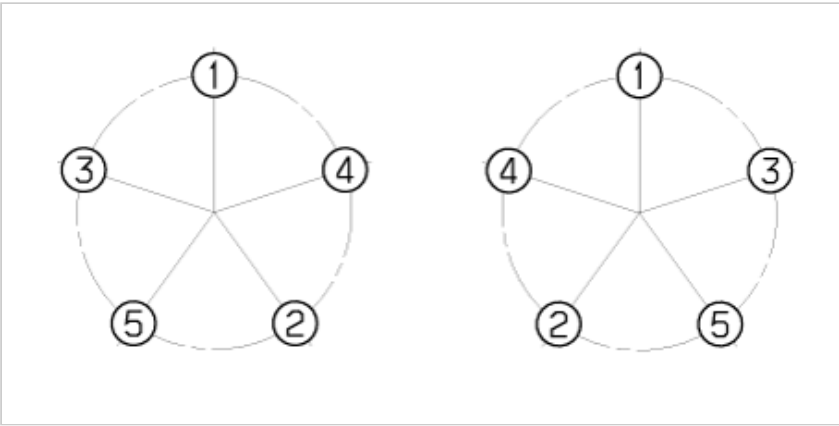

CAUTION

When using an impact gun, final tightening torque should be checked using a torque wrench.

Run out inspection

- 1. Jack up the vehicle.
- 2. Measure the wheel run-out by using a dial indicator as shown below.

Run-out	Aluminum
Radial mm (in.)	Below 0.3 (0.0118)
Lateral mm (in.)	Below 0.3 (0.0118)

- 3. If measured value exceeds the standard value, replace the wheel.

