



Removal

Steering column module (SCM)

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the crash pad lower panel.
(Refer to Body -"Crash pad lower panel")
3. Disconnect the steering column module connector.



4. Loosen the steering column module bracket bolts and then remove the steering column module.



5. Install in the reverse order of removal.


Steering column module (SCM) switch

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the crash pad lower panel.
(Refer to Body -"Crash pad lower panel")
3. Disconnect the steering column module connector.
(Refer to Body -"Steering Column Shroud Panel")

4. Disconnect the steering module switch connector and clip.



5. Using the driver, remove the steering column module switch.

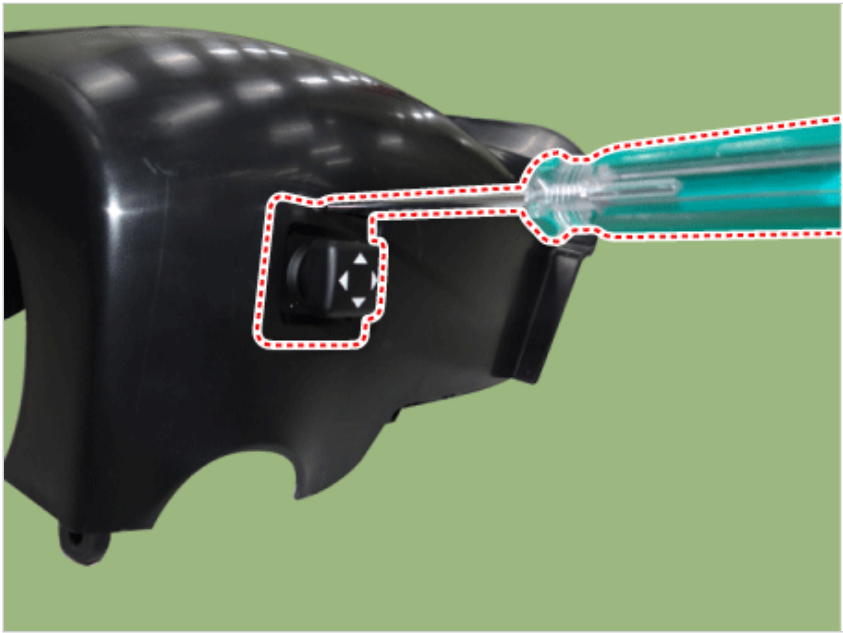

6. Install in the reverse order of removal.

Steering Limit Position Setting

NOTICE

- Steering Limit Position Setting is must be done when any of cases is met as below.
 - After replacing SCM Unit.
 - After replacing steering.
 - SCM Error(Only 2 second movement while pressing SCM switch)

1. Perform the "Steering Limit Position Setting" using the KDS.

-
-
-
-