



## Troubleshooting

Symptom	Probable cause	Remedy
Play in steering	Loose yoke plug	Retighten
	Loose steering gear mounting bolts	Retighten
	Loose or worn tie rod end	Retighten or replace as necessary
Steering wheel does not return properly	Excessive turning resistance of tie rod end	Replace
	Yoke plug excessively tight	Adjust
	Tie rod and/or ball joint not turning smoothly	Replace
	Loose mounting of gear box mounting bracket and/or worn steering shaft joint	Retighten
	Worn steering shaft joint and/or body grommet	Correct or replace
Rattling or chucking noise in the rack and pinion	Loose gear box bracket	Retighten
	Loose tie rod end and/or ball joint	Retighten
	Worn tie rod and/or ball joint	Replace