





Removal

1. Disconnect the negative battery terminal, and wait for at least three minutes before beginning to work.
2. Remove the crash pad lower panel.
(Refer to Body (Interior and Exterior) - "Crash Pad Lower Panel")
3. Loosen the nuts (A) and then disconnect the connector (B).

Tightening torque :

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

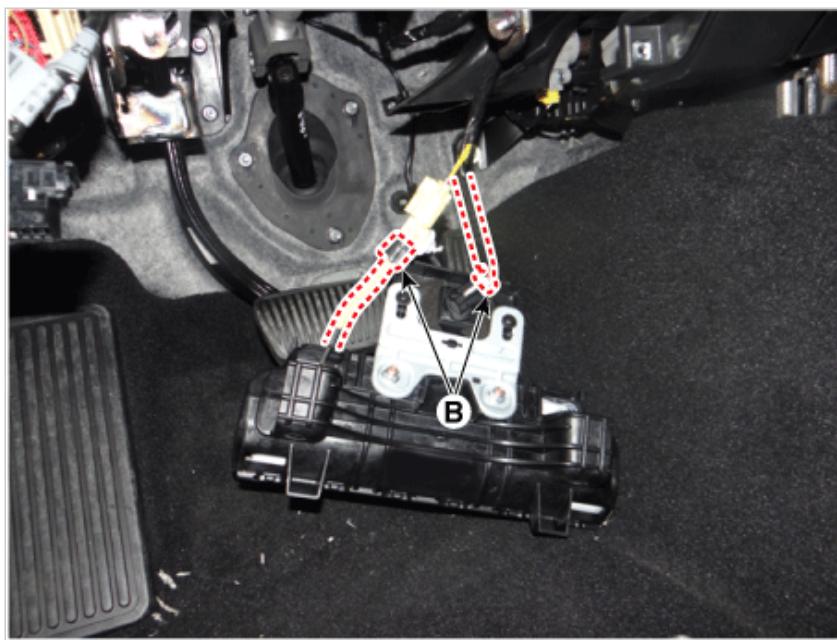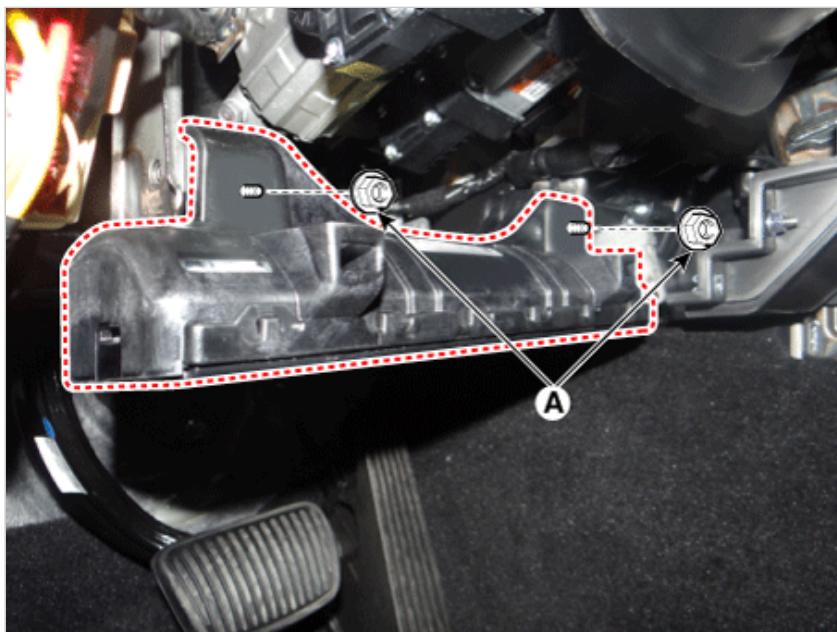

Installation

1. Disconnect the negative battery terminal, and wait for at least three minutes before beginning to work.
2. Install in the reverse order of removal.
3. Reconnect the negative battery cable.
4. After installing the knee airbag (KAB), confirm proper system operation.
 - Switch "ON" the ignition. The SRS indicator light should turn on for about six seconds and then off.