



Description

Installed inside the crash pad, the passenger airbag (PAB) protects the front passenger in the event of a frontal crash. The SRSCM determines if and when to deploy the PAB.

⚠ CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.