



Description

- The front impact sensor (FIS) is installed in the Front End Module (FEM).
- FIS is a remote sensor that detects acceleration due to a collision at its mounting location.
- The primary purpose of the Front Impact Sensor (FIS) is to provide an indication of a collision. The Front Impact Sensor (FIS) sends acceleration data to the SRSCM.