





Description

Introduction of quick brake warning system (ESS)


In case of quick brake by driver, the brake lamp or turn signal is blinked to warn against the vehicle at rear.

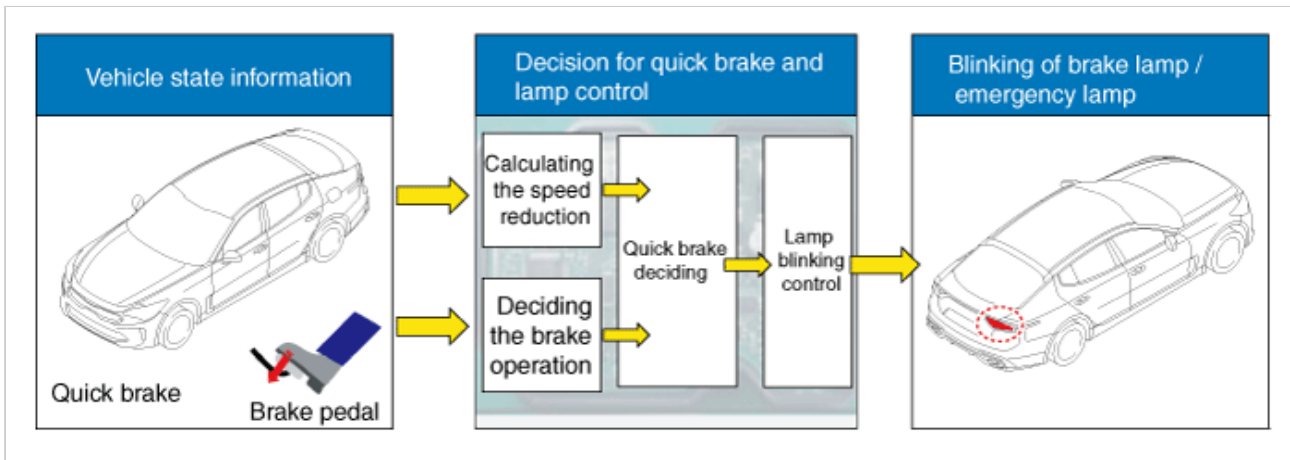

1. Basic function (Blinking the brake lamp/emergency lamp)
 - Operation condition: In case of quick brake or operation of ABS above in a certain speed
 - Releasing condition: In case of stopping the quick brake or releasing the ABS operation
2. Additional function (Blinking the turn signal)
 - Operation condition: In case of quick brake in low speed
 - Releasing condition: Releasing at the start of driving

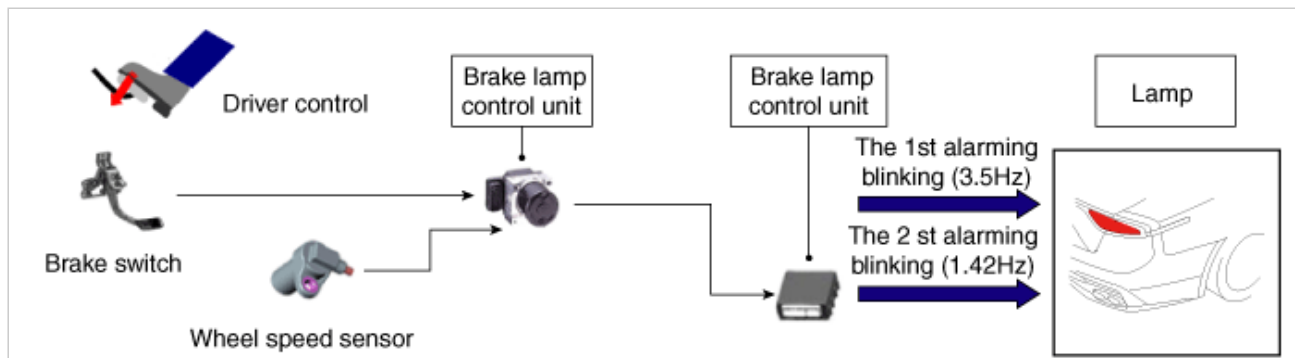

System configuration

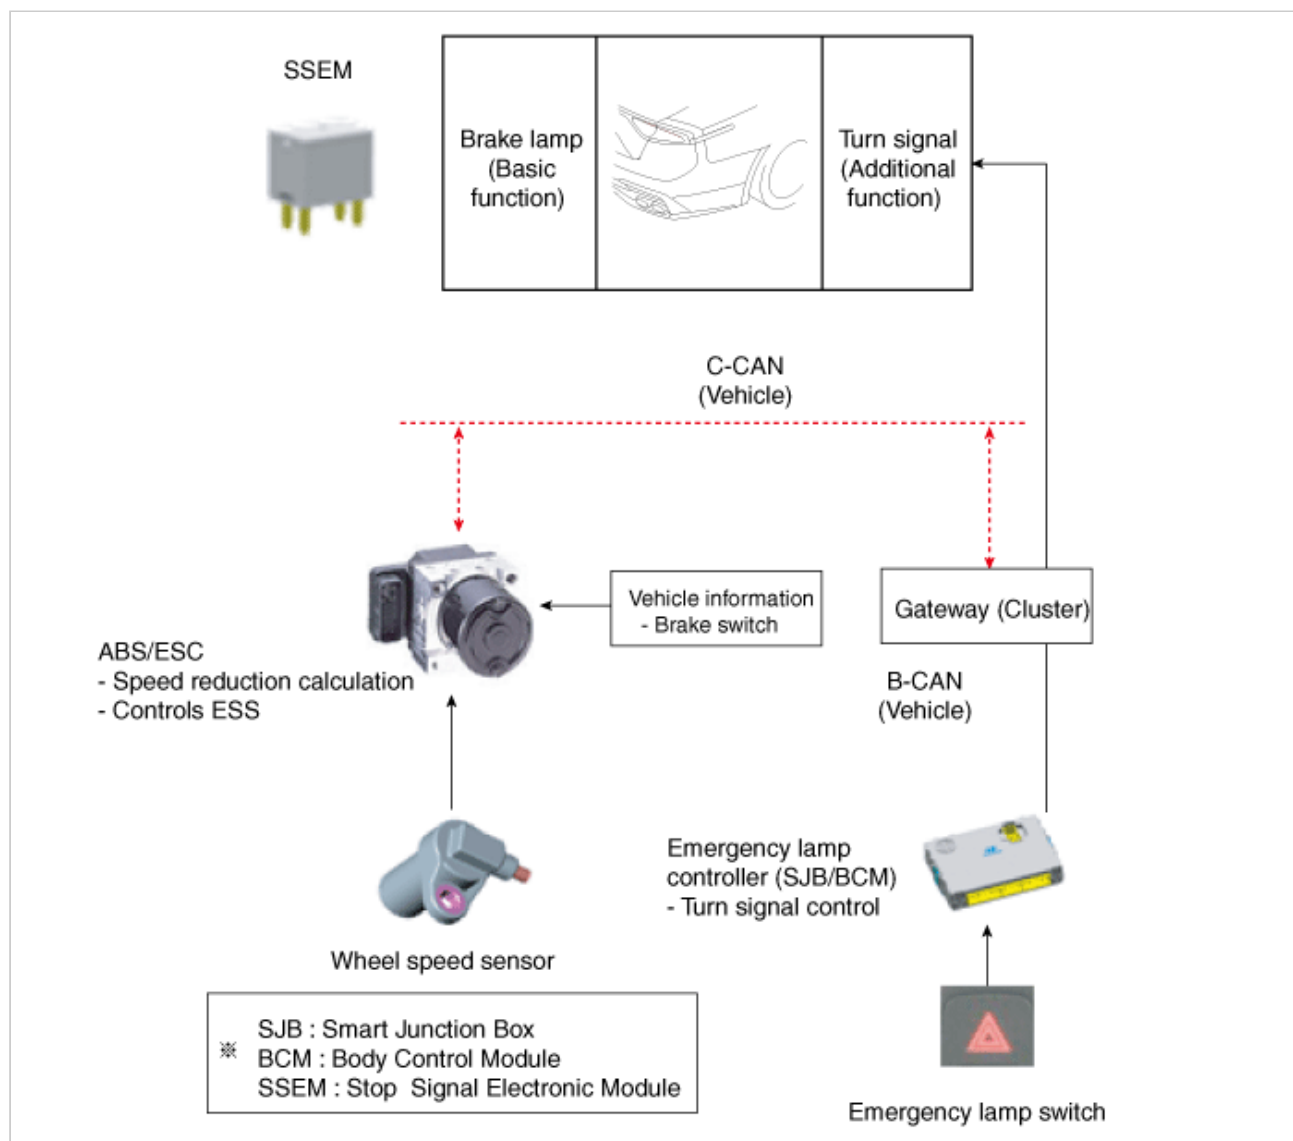

ESS Circuit diagram

