



## Description

Steering Wheel Angle Sensor detects rotating direction of the vehicle. The rotating direction detected by the sensor is sent to the HECU as CAN signal via CAN communication.

HECU detects speed of the steering wheel handling and the angle with this CAN signal. HECU also uses this signal as the input signal to control anti-roll.