



## Replacement

### CAUTION

Put on gloves to protect your hands.

### Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

- Remove the tail gate trim.  
**(Refer to Tail Gate - "Tail Gate Trim")**
- Remove the tail gate lever bumper (A) after loosening the mounting screw.



- Loosen the rear spoiler mounting nuts.

#### Tightening torque :

5.9 - 6.4 N·m (0.6 - 0.65 Kgf·m, 4.3 - 4.7 lb·ft)



4. Remove the rear spoiler (A).



5. Install in the reverse order of removal.

 **Information**

Replace any damaged clips.