



Replacement


⚠ CAUTION

Put on gloves to protect your hands.

ℹ Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the rear tire.
2. After loosening the mounting clips and screws, remove the rear wheel guard (A).

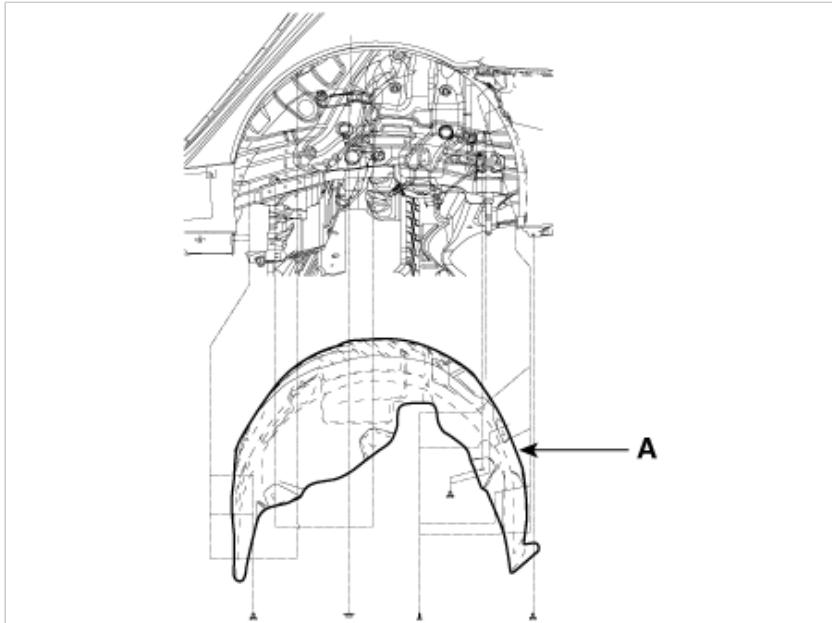

3. Install in the reverse order of removal.

ℹ Information

Replace any damaged clips.