



Replacement


CAUTION

Put on gloves to protect your hands.


NOTICE

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the console assembly.
(Refer to Floor console - "Floor Console Assembly")
2. Remove the rear console bracket (A) after loosening the console lower side mounting screws.

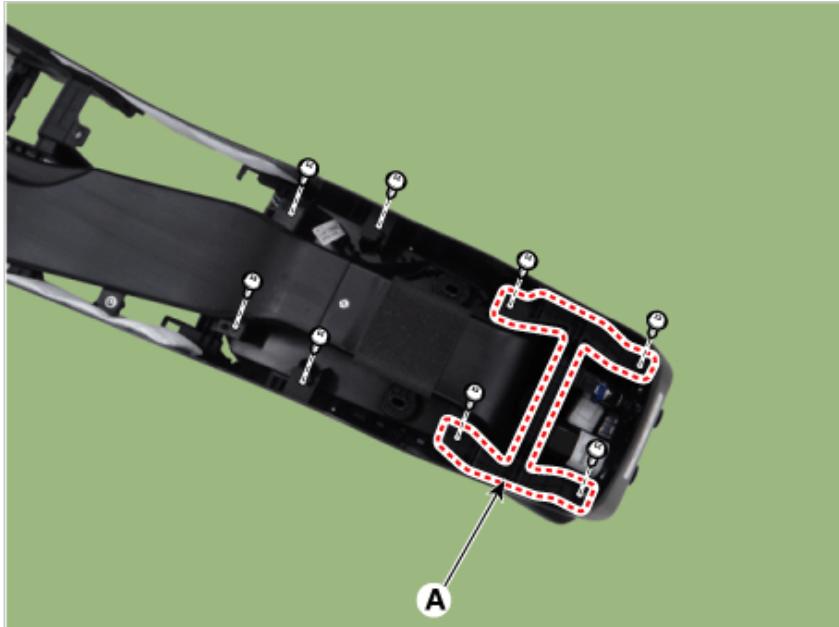


3. Remove the console storage box & armrest(A) after loosening the mounting screws.

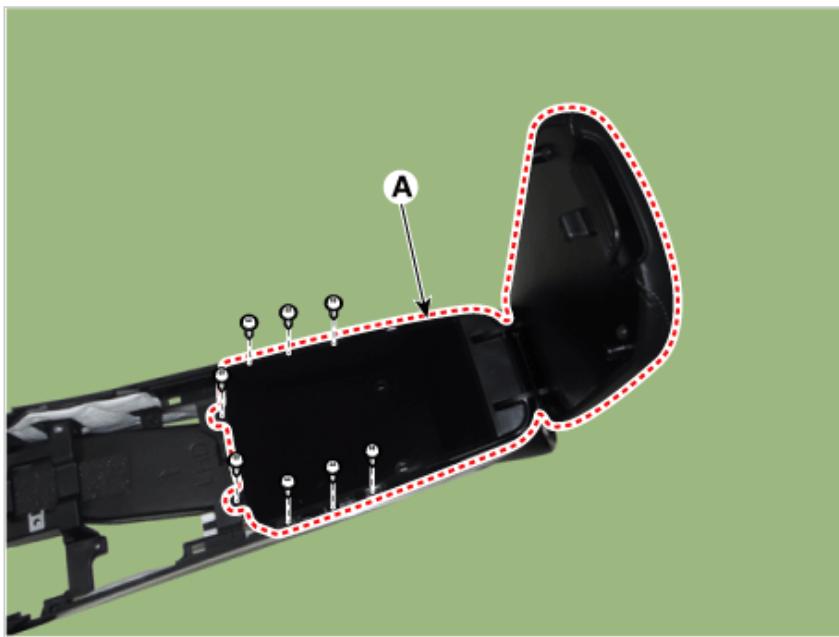

4. Disconnect the console lower side extension wiring mounting clip (A).

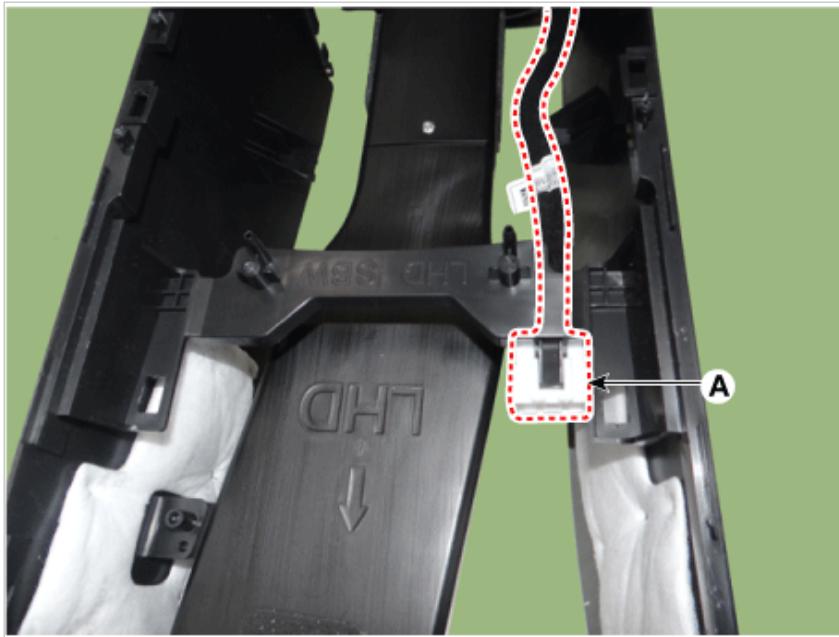

5. Remove the console rear cover (A) after loosening the mounting screws.

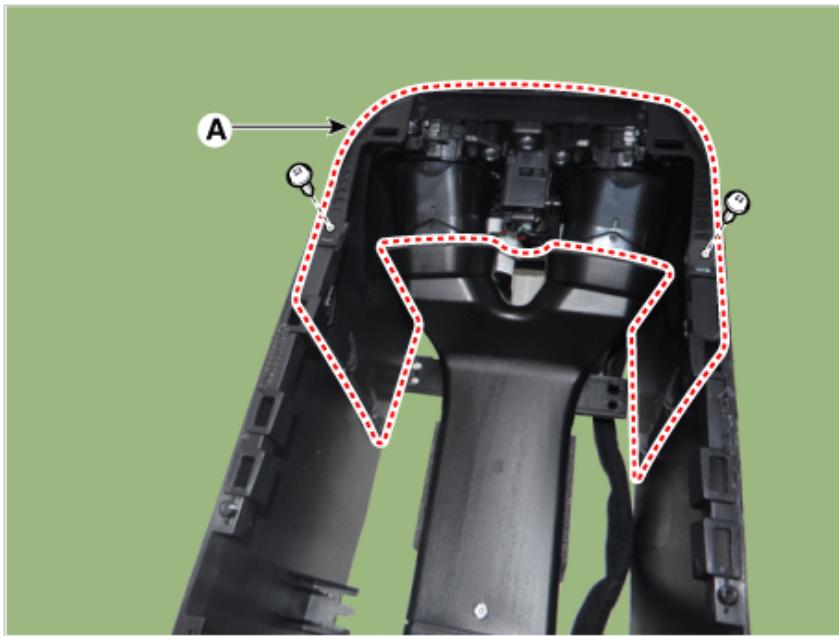

6. Install in the reverse order of removal.

 **Information**

- Make sure the connector are connected in properly.
- Replace any damaged clips.