



Replacement


CAUTION

Put on gloves to protect your hands.

NOTICE

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the fender side cover (A).

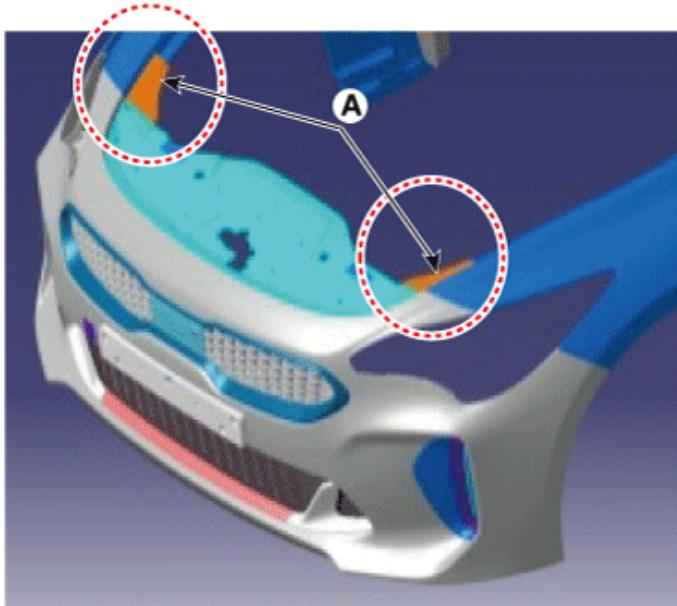


2. Loosen the radiator upper cover mounting clips and sides mounting bolts.




3. Loosen the engine room under cover mounting clips.

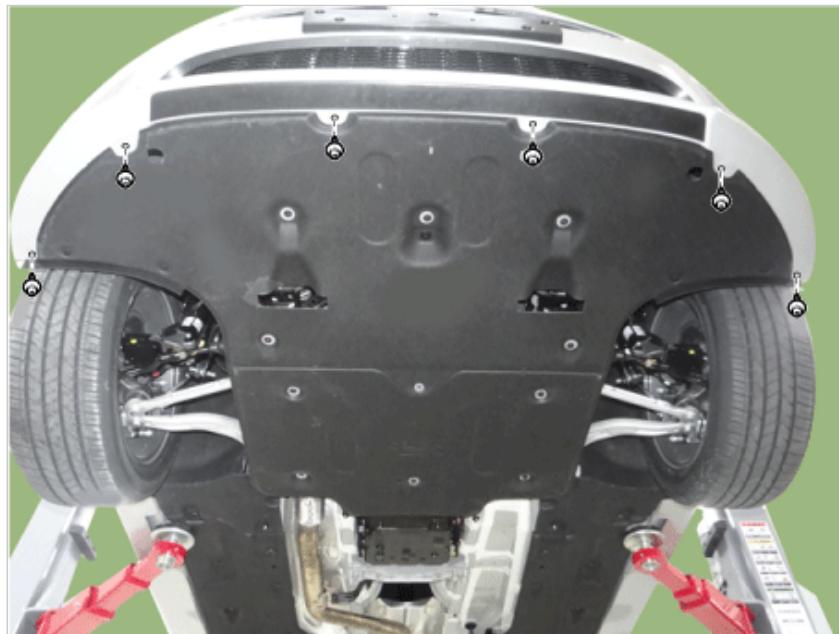


4. Separate the front bumper (A) after loosening the sides mounting clips and screws

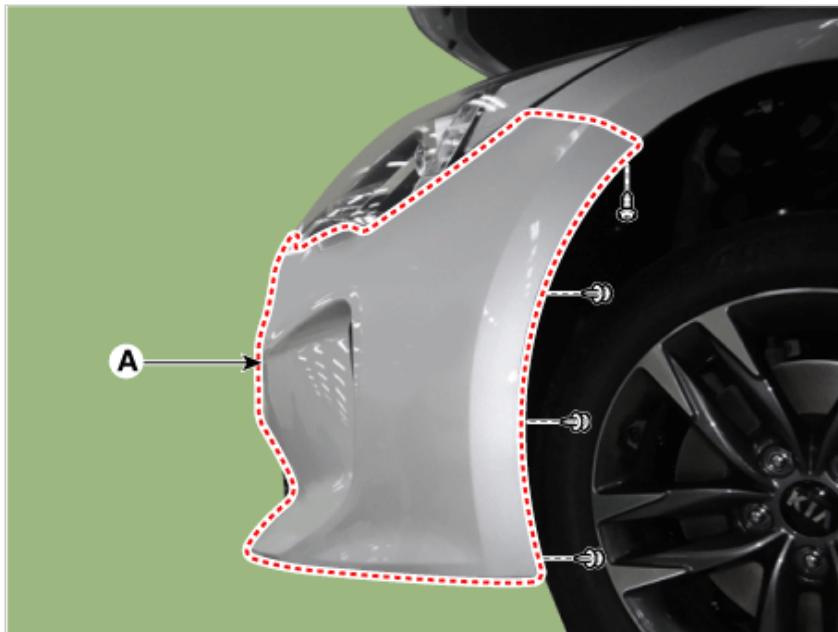

5. Disconnect the front bumper main connector (A).

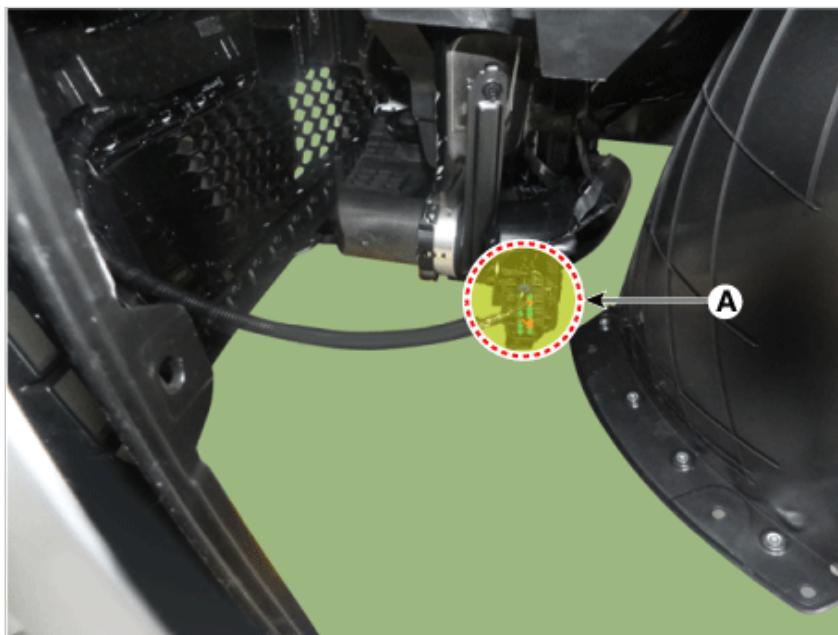

6. Remove the front bumper cover (A).

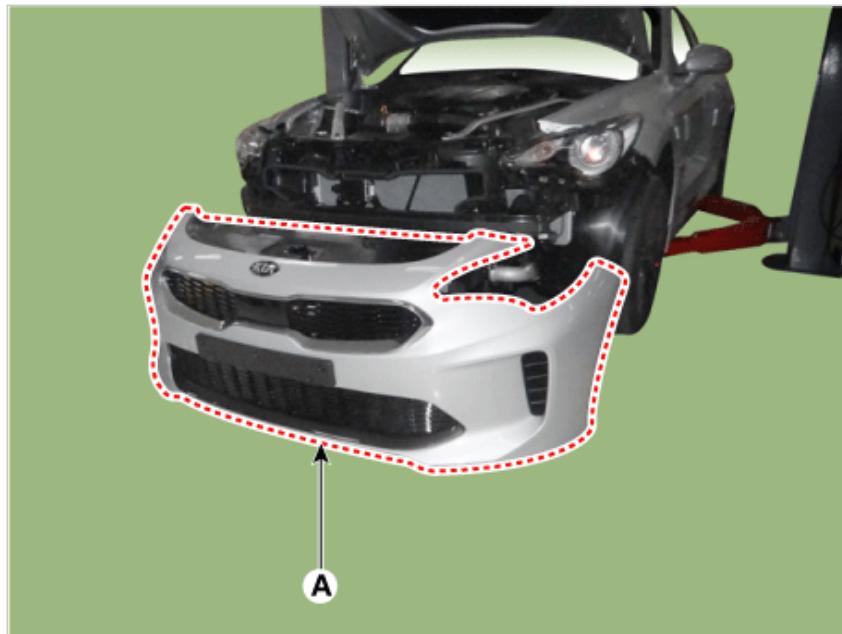

7. Install in the reverse order of removal.

i Information

- Make sure the connector are connected in properly.
- Replace any damaged clips.