



Replacement


⚠ CAUTION

Put on gloves to protect your hands.


NOTICE

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the front bumper assembly.
(Refer to Front Bumper - "Front Bumper Assembly")
2. Remove the mounting clip (A) and then remove the front bumper energy absorber (B).

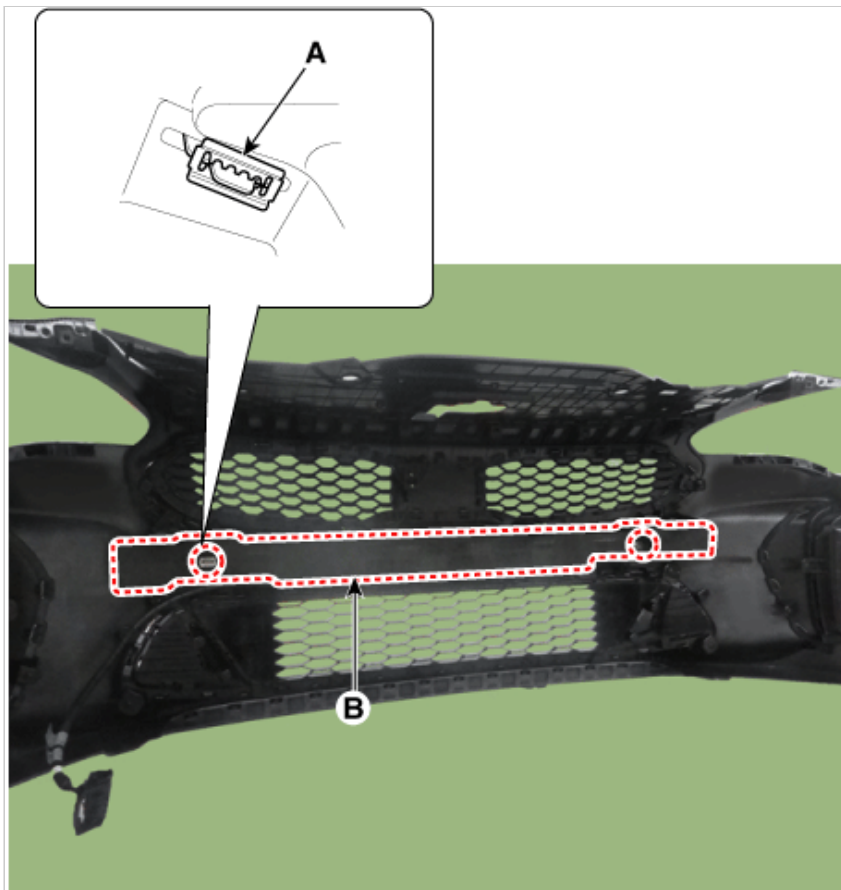


3. Remove the front bumper wiring (A).

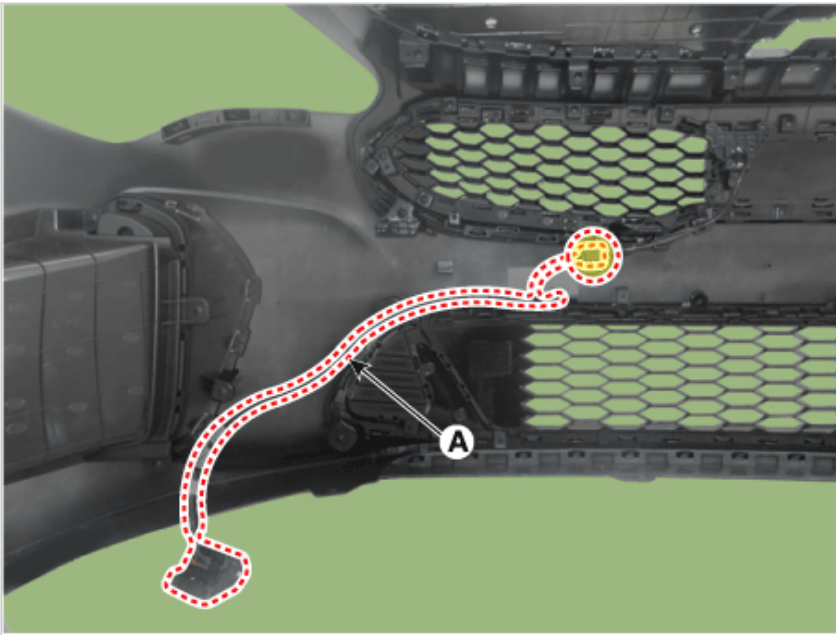


4. Remove the pantoscopic camera (A).

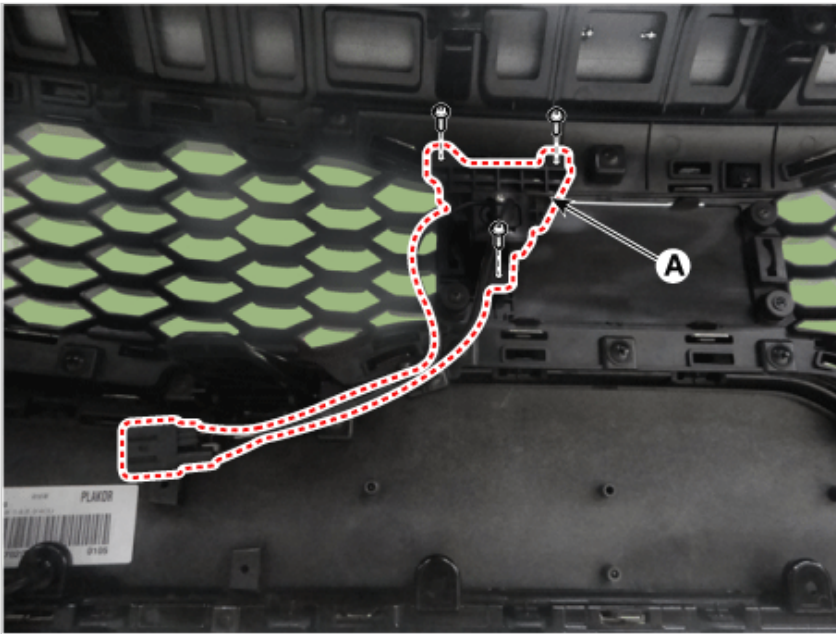


5. Remove the radiator upper cover (A) after loosening the screws.

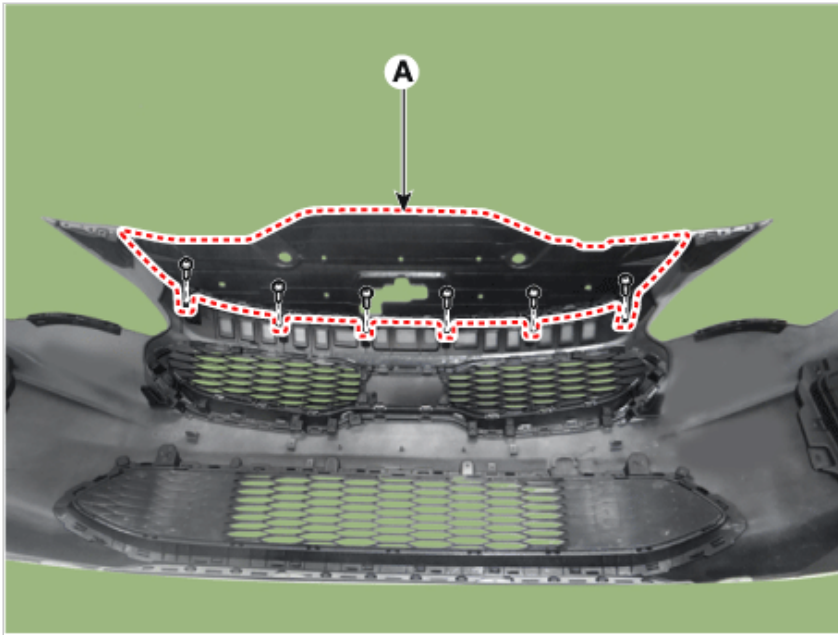

6. Remove the radiator grille (A) after loosening the screws.

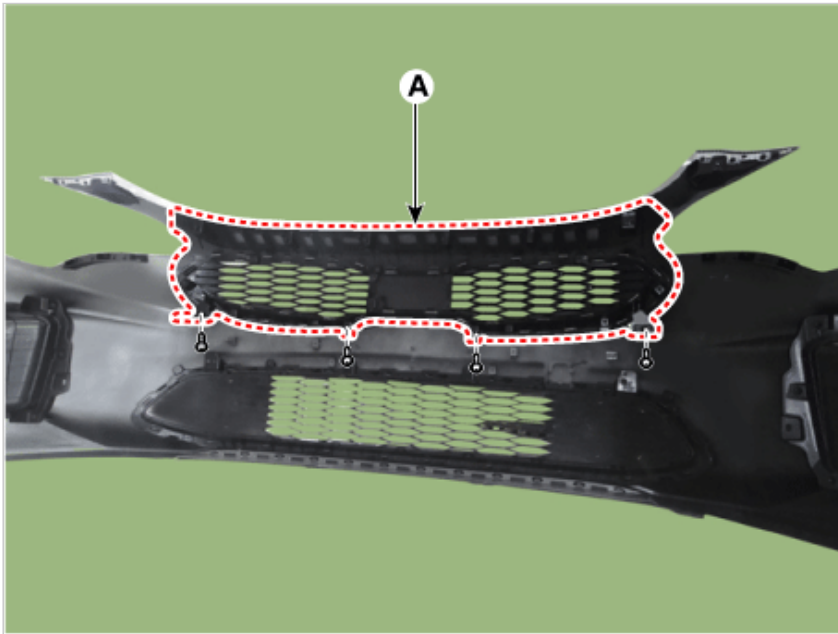

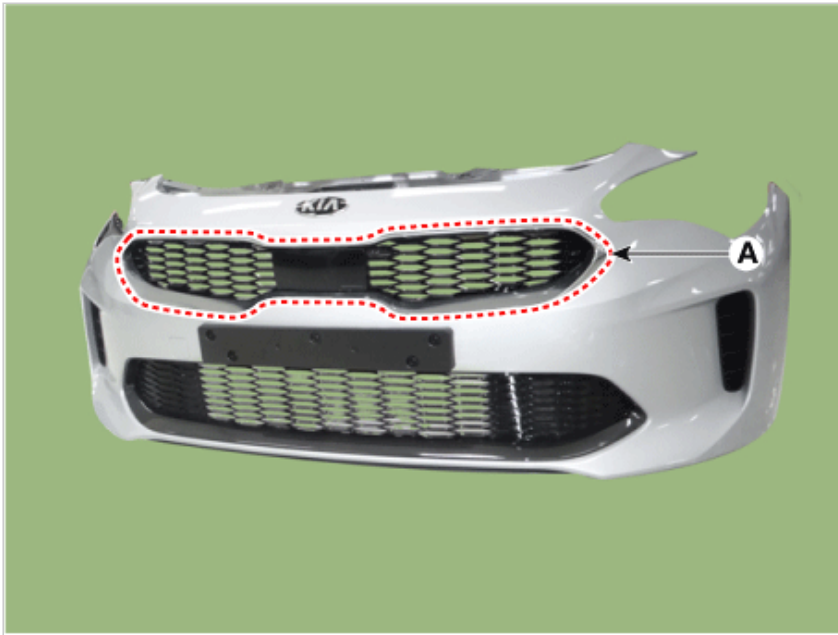

7. Install in the reverse order of removal.

i Information

Replace any damage clips.