



## Replacement


### CAUTION

Put on gloves to protect your hands.

### NOTICE

- When prying with a flat-tip screwdriver or using a prying trim tool, wrap protective tape around the tool and related parts to prevent damage.
- Be careful not to scratch the door trim and other parts.


- Remove the front door lock cover (A) and cap (B).

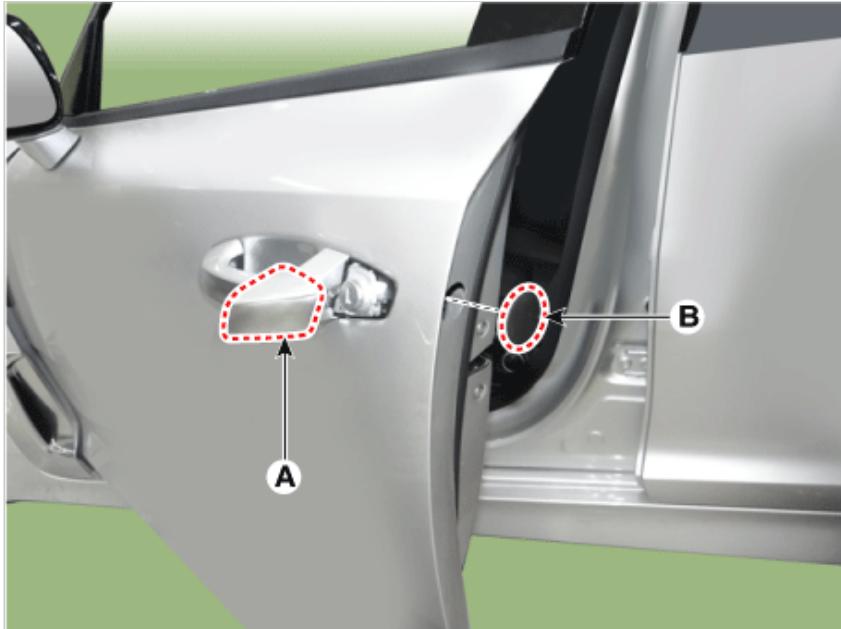


- Remove the front door lock (A) after loosening the mounting bolt.

#### Tightening torque :

3.4 - 5.7 N·m (0.4 - 0.6 kgf·m, 2.9 - 4.3 lb·ft)

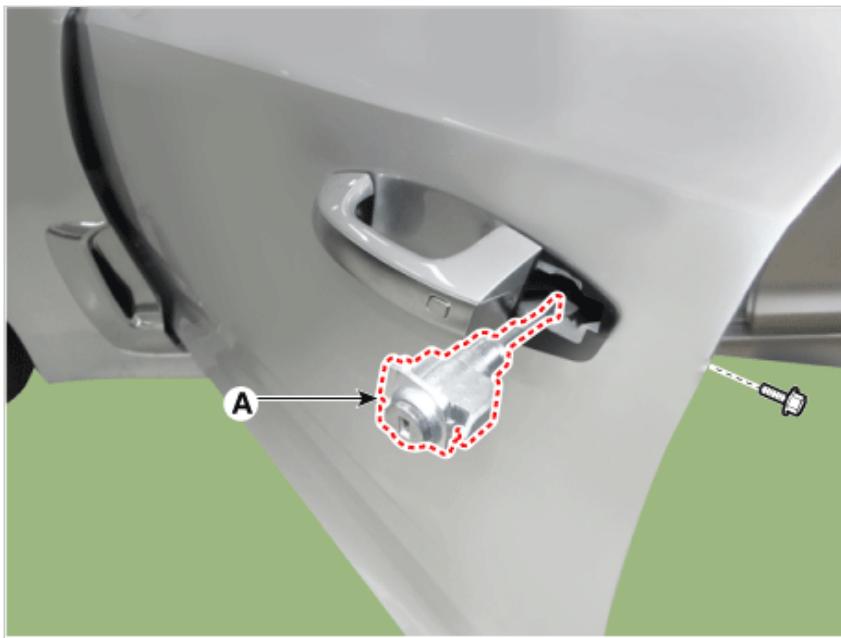

- Remove the front door outside handle (A) by sliding it rearward.

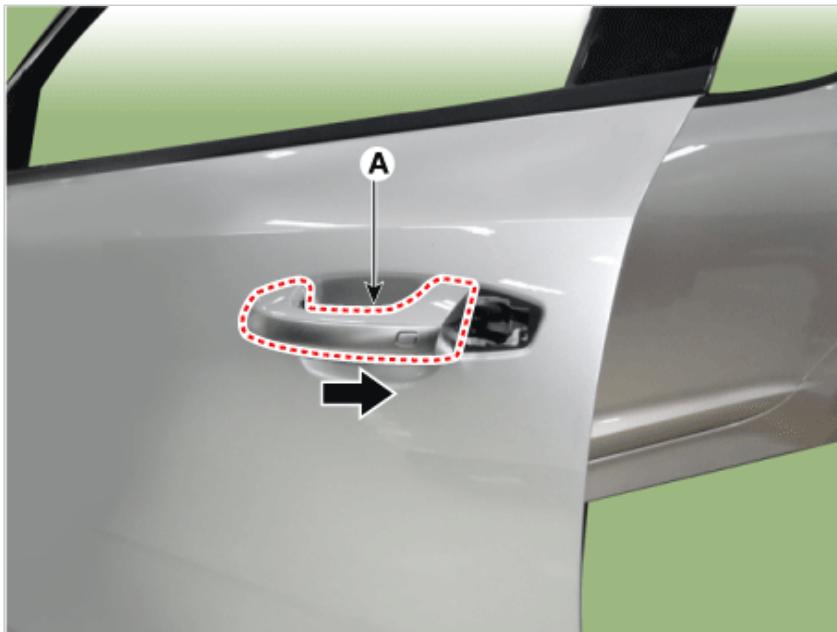


4. Disconnect the front door outside handle connector (A).



5. Install in the reverse order of removal.

**Information**

- Be sure to install the outside handle pad (A) between the outside handle and the door panel

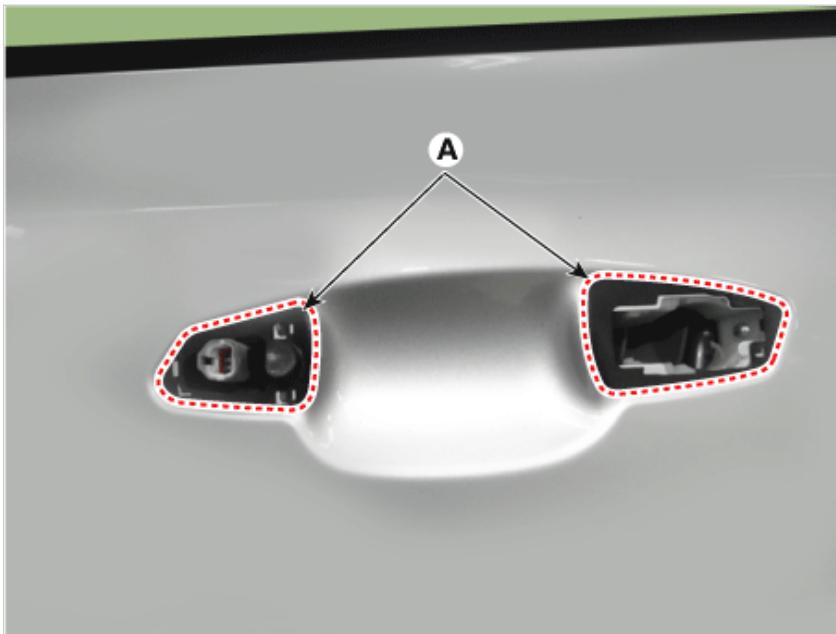

- Check that glass operation is normal.
- Adjust glass if necessary.
- Make sure that the connector is connected properly.
- Make sure that the door locks/unlocks and opens/closes properly.