



Replacement

CAUTION

- Put on gloves to protect your hands.
- Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury

NOTICE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the front seat back cover.

(Refer to Front Seat - "Front Seat Back Cover")


2. Remove the front seat cushion cover.

(Refer to Front Seat - "Front Seat Cushion Cover")

3. Remove the lumbar support assembly.

(Refer to Body Electrical System - "Lumbar Support Unit")

4. After loosening the mounting bolts, disconnect the front seat back frame assembly (A) and front seat cushion frame assembly (B).

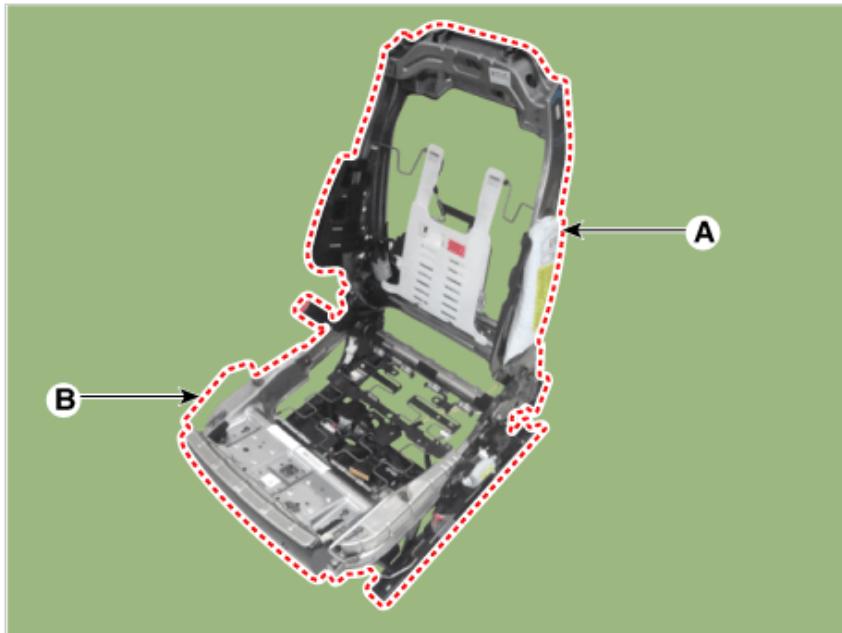

5. Install in the reverse order of removal.