



Replacement

⚠ CAUTION

Put on gloves to protect your hands.

ℹ Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the front seat assembly.
(Refer to Front Seat - "Front Seat Assembly")
2. Remove the front seat shield inner cover (A) after loosening the mounting screw.



3. Install in the reverse order of removal.

ℹ Information

Replace any damage clips.