



Replacement


CAUTION

Put on gloves to protect your hands.

Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

- Remove the front seat forward extension cover (A).

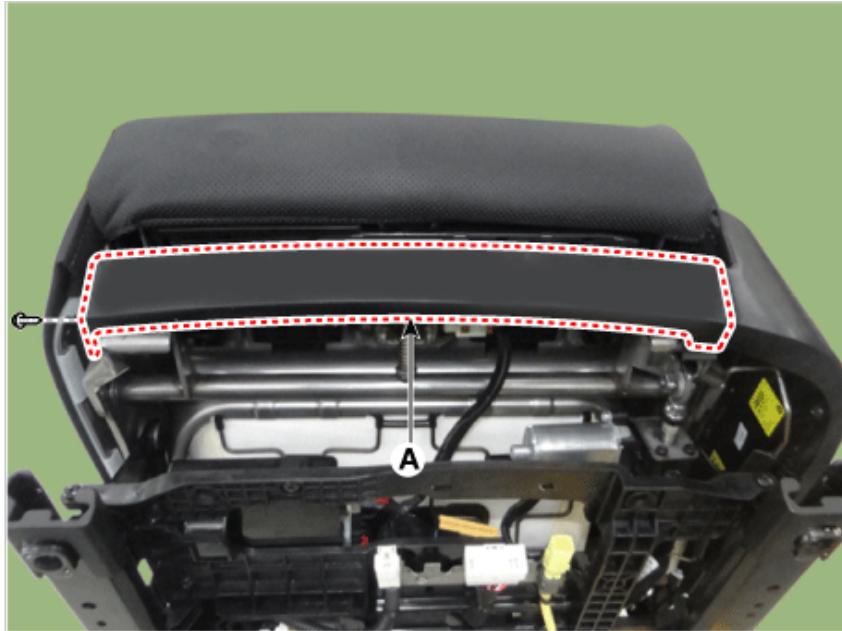

- Remove the front seat outer shield cover (A) by using a remover.

NOTICE

Be careful not to damage the mounting bracket and hook when removing the cover..



- Disconnect the front seat power switch connector (A).



4. Install in the reverse order of removal.

 Information

Make sure that the connectors are plugged in properly.