



Replacement


NOTICE

When installing the belt, be careful not to damage the retractor.


1. Remove the center pillar trim.
(Refer to Interior Trim - "Center Pillar Trim")
2. Separate the front seat belt upper anchor (A) after loosening the mounting bolt.

Tightening torque :

39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.8 - 39.8 lb·ft)

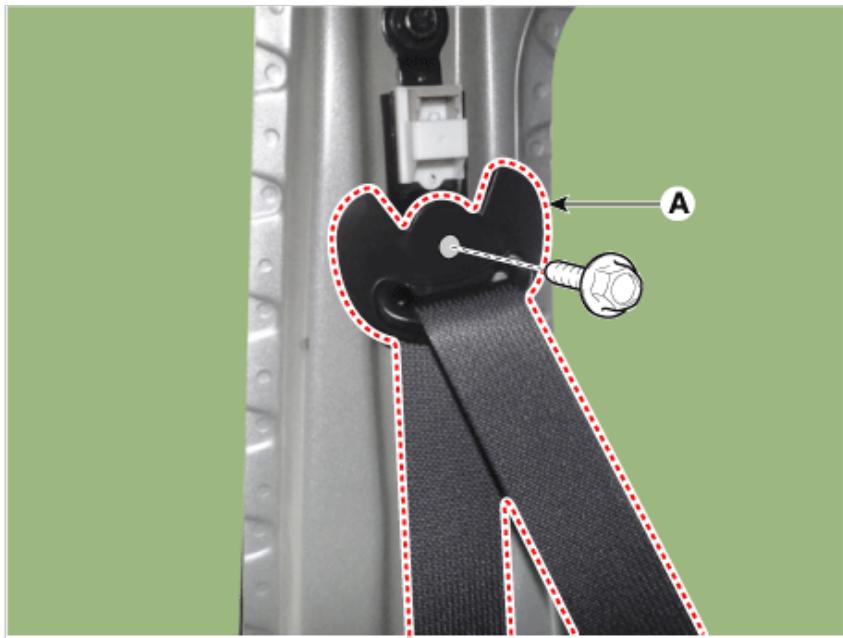

3. Disconnect the front seat belt retractor connector (A).

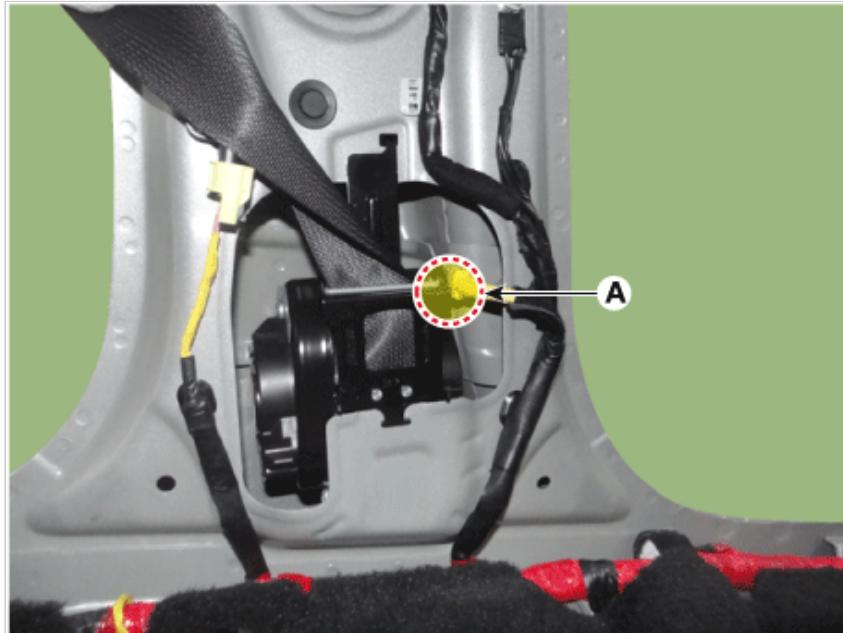


4. Remove the front seat belt retractor (A) after loosening the mounting bolt.

Tightening torque :

Lower : 39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.8 - 39.8 lb·ft)

Upper : 7.8 - 11.8 N·m (0.8 - 1.2 Kgf·m, 5.8 - 8.7 lb·ft)

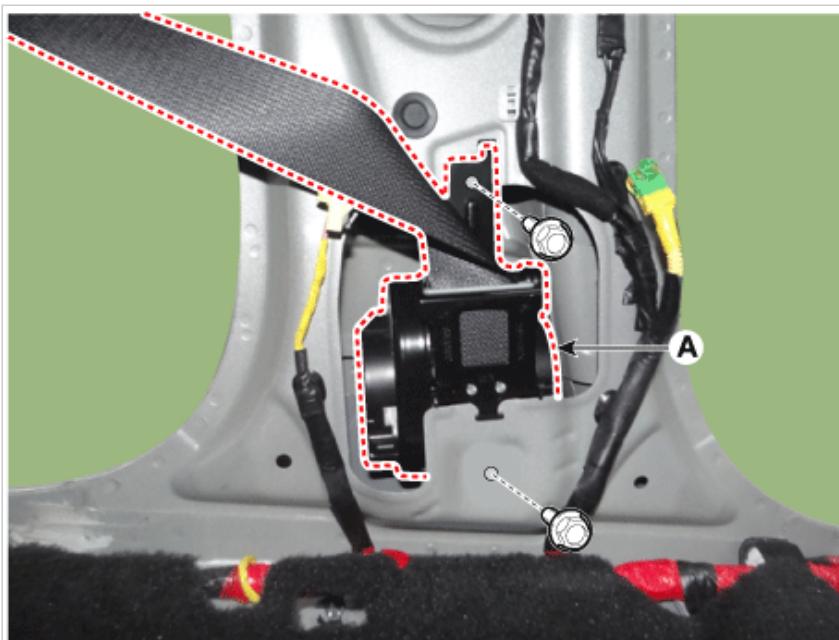

5. Install in the reverse order of removal.

i Information

- Make sure that the connector is plugged in properly.
- Replace any damaged clips.