



Replacement

NOTICE

Be careful not to damage the hood and body.

Information

When removing and installing the hood, work in a group of two or more.

1. After loosening the hood hinge (A) mounting bolts, remove the hood assembly (B).

Tightening torque :

21.6 - 26.5 N·m (2.2 - 2.7 Kgf·m, 15.9 - 19.5 lb·ft)



2. Install in the reverse order of removal.

Information

- Make sure that the hood locks/unlocks and opens/closes properly.
- Adjust the hood alignment.