




Replacement

1. Using a clip remover, detach the clips, and remove the hood insulator pad (A).

NOTICE

Be careful not to scratch the hood panel.

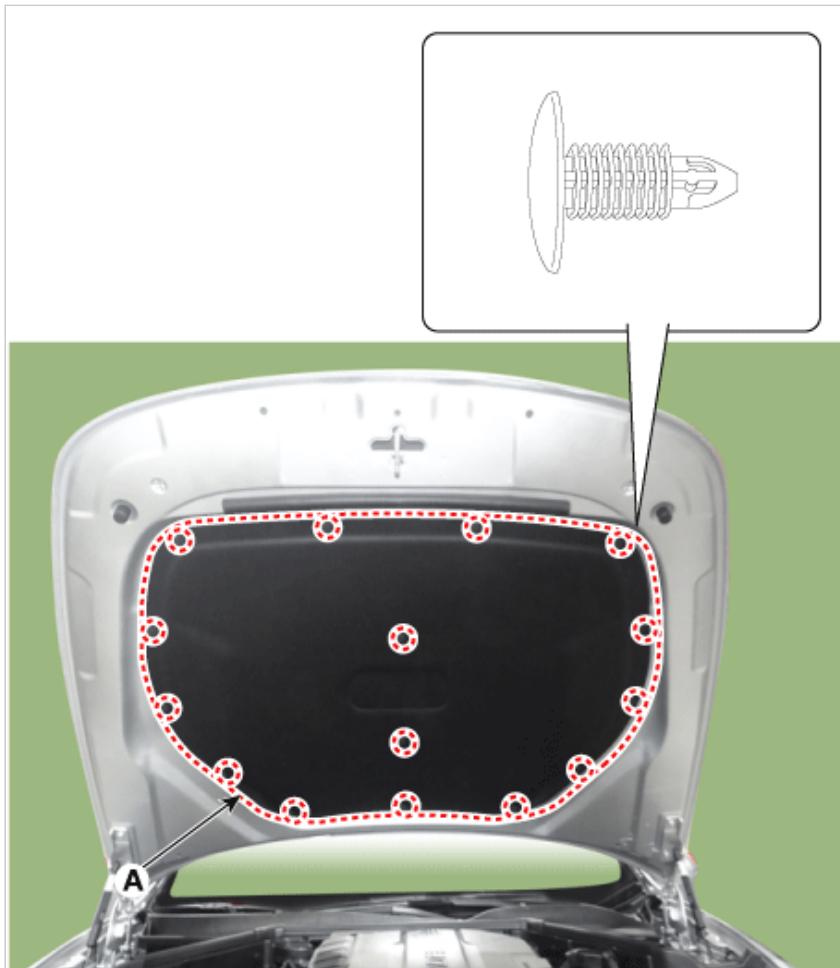

2. Install in the reverse order of removal.

Information

Replace any damaged clips.