



Replacement

Information

- When removing and installing the hood lifter, work in a group of two or more.
- When removing the hood lifter, first remove the lower portion and then upper portion.

- Using a screwdriver, lift the socket clips (A) up slightly on both ends of the lifter (B), and then remove the lifter from the bracket.



- Push the socket of the lifter into the bracket for installation.

Information

Make sure that the hood locks/unlocks and opens/closes properly.