



Adjustment

1. After loosening the hinge (A) mounting bolt, adjust the hood (B) by moving it up and down, or right and left.
2. Adjust the hood height by turning the hood overslam bumpers (C).
3. After loosening the hood latch (D) mounting bolts, adjust the latch by moving it up and down, or right and left.

