




Replacement

1. Detach the clip and then remove the hood seal weatherstrip (A).

NOTICE

Be careful not to scratch the hood seal weatherstrip.

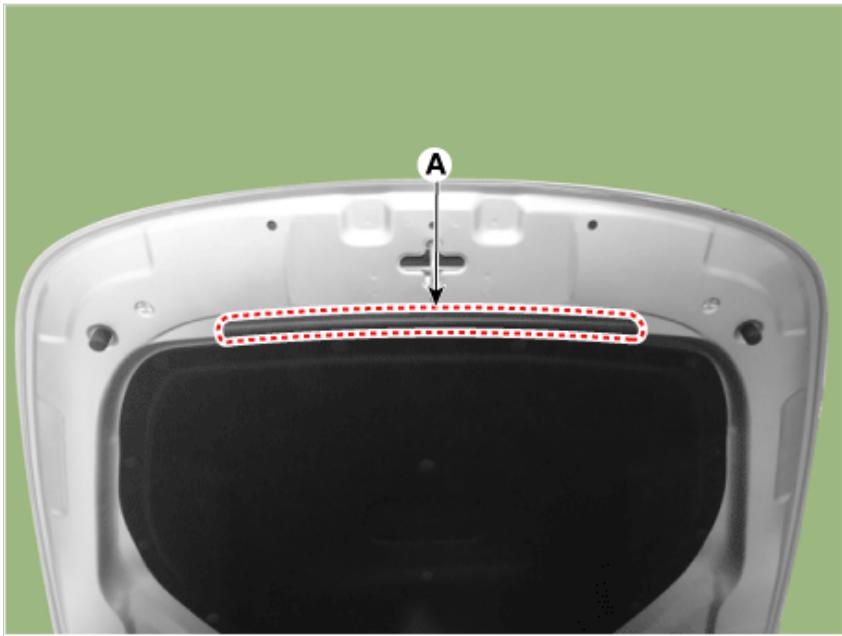

2. Install in the reverse order of removal.